


Översikt av stosplacering på VEX100CF - VEX200 - VEX300


1.1. Frånluft 1.2 Avluft 2.1. Uteluft 2.2 Tilluft

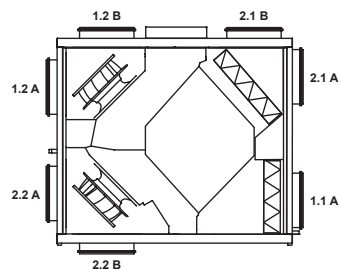


VEX100CF - Horizontal LEFT




VEX100CF - Horizontal RIGHT

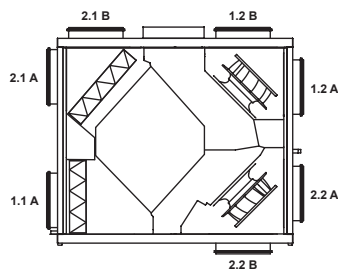


VEX100CF - Vertikal LEFT

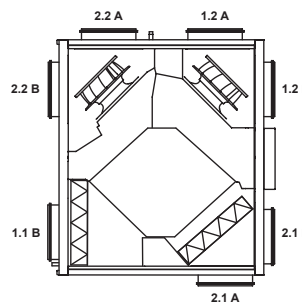


VEX100CF - Vertikal RIGHT

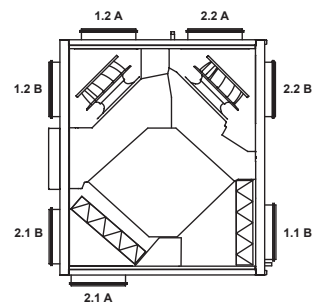


VEX200 - Kompaktfiler Ventilatorplacering 1 - LEFT

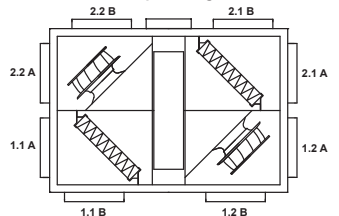


VEX200 - Posefilter Ventilatorplacering - RIGHT

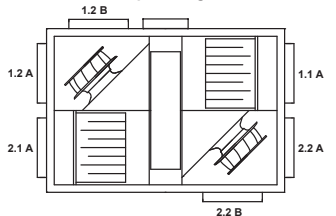


VEX200 - Kompaktfiler Ventilatorplacering - LEFT

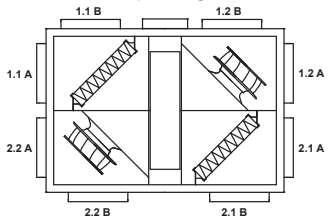


VEX200 - Posefilter Ventilatorplacering - RIGHT

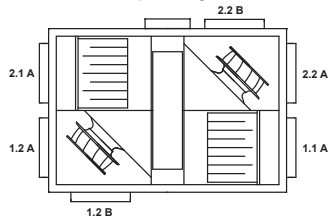


VEX300T RIGHT

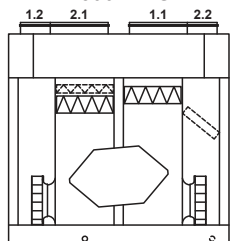


VEX300T RIGHT

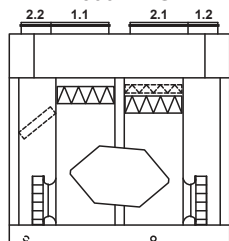


VEX330 Horizontal **

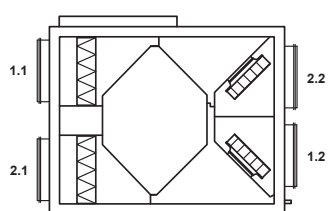


VEX340 LEFT

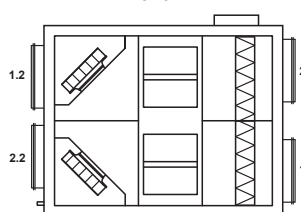


VEX340 RIGHT

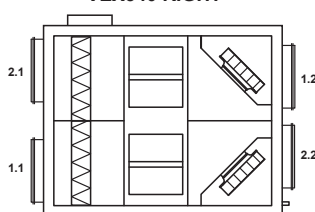

VEX350/360 LEFT

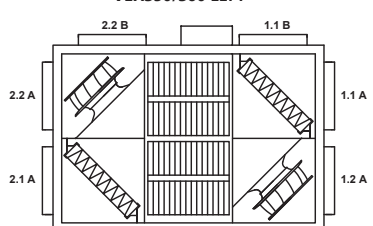

VEX350/360 RIGHT

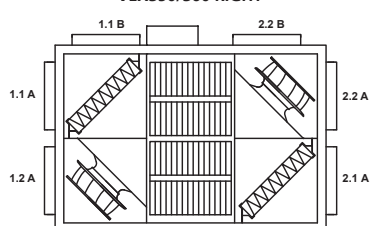


Översikt av stosplacering på VEX100CF - VEX200 - VEX300




1.1. Frånluft 1.2 Avluft 2.1. Uteluft 2.2 Tilluft


VEX370 LEFT

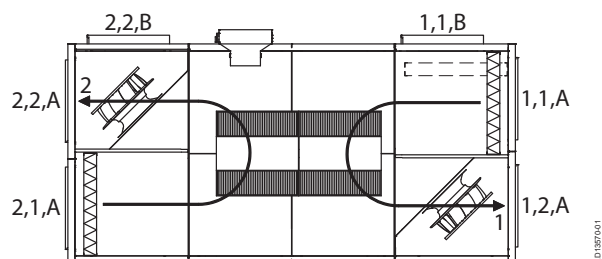


VEX370 RIGHT

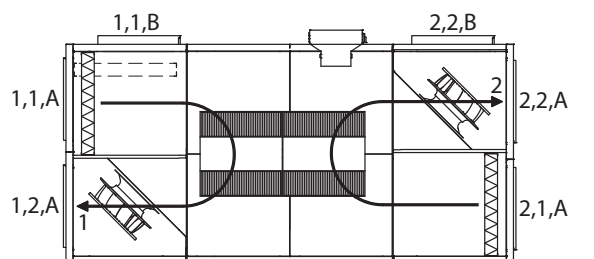


VEX370 Flue Gas LEFT

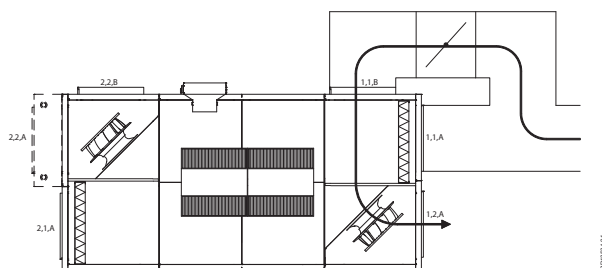


VEX370 Flue Gas RIGHT

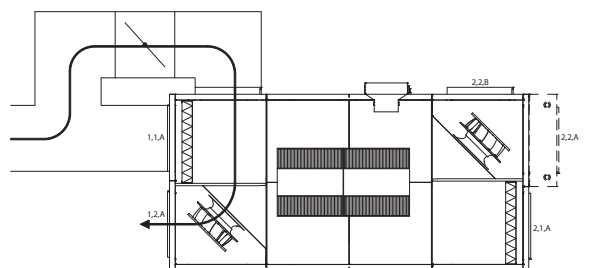

VEX370 HCWI LEFT

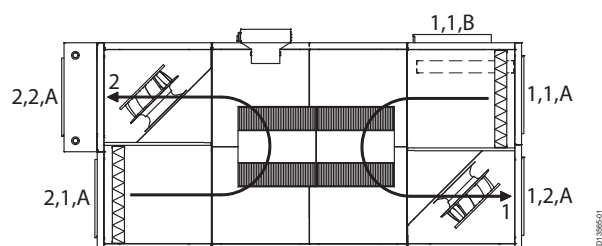

VEX370 HCWI RIGHT

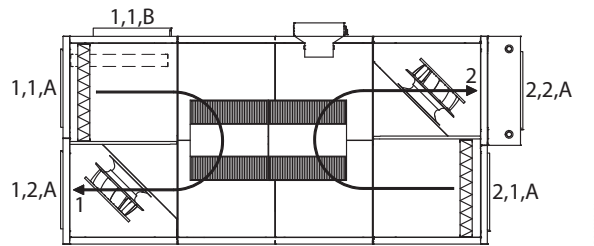

3006661 - 07.2023 - EXHAUSTO förbehåller sig rätten till ändringar utan föregående meddelande.

EXHAUSTO