


# Mounting of EHV Unit on FPP

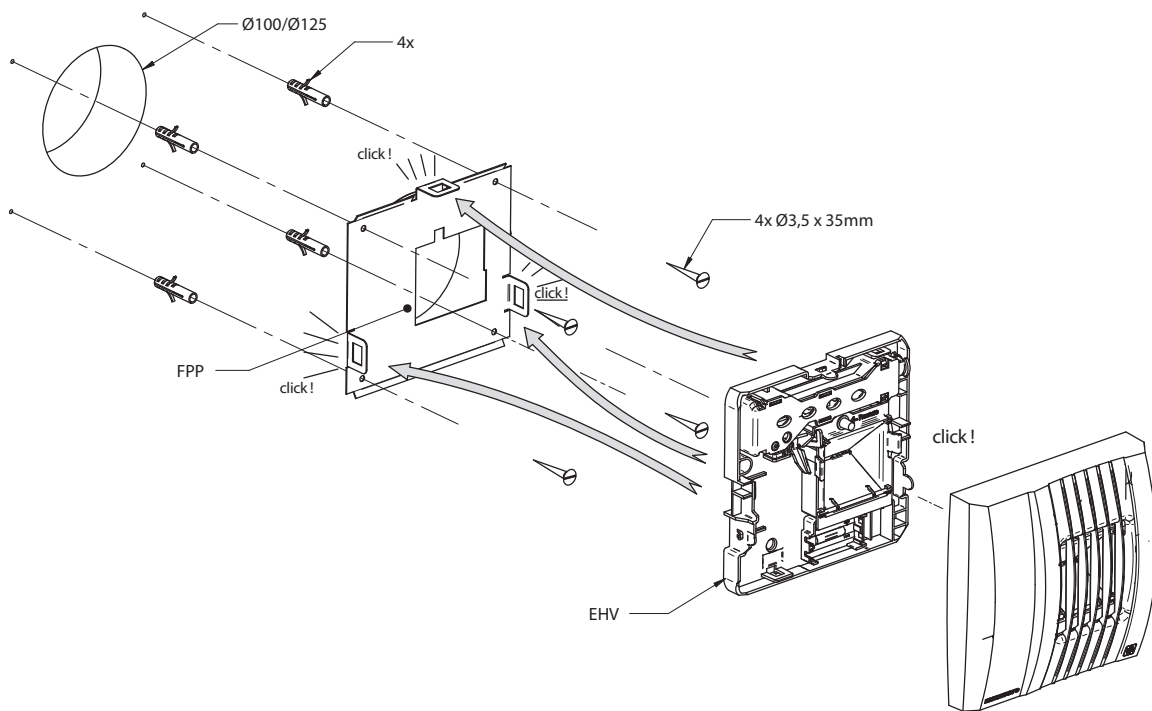

EXHAUSTO A/S  
Odensevej 76  
DK-5550 Langeskov

Tel. +45 65 66 12 34  
Fax +45 65 66 11 10  
exhausto@exhausto.dk  
www.exhausto.dk

**EXHAUSTO**  
FOR A BETTER FLOW



### **EXHAUSTO A/S**

Odensevej 76  
DK-5550 Langeskov  
Tel.: +45 6566 1234  
Fax: +45 6566 1110  
exhausto@exhausto.dk  
www.exhausto.dk

### **EXHAUSTO GmbH**

Am Ockenheimer Graben 40  
D-55411 Bingen-Kempton  
Tel.: +49 6721 9178-112  
Fax: +49 6721 9178-97  
info@exhausto.de  
www.exhausto.de

### **EXHAUSTO NORGE A/S**

Lilleakerveien 25  
N-0283 Oslo  
Tel.: +47 2412 4200  
Fax: +47 2412 4201  
post@exhausto.no  
www.exhausto.no

### **EXHAUSTO AB**

Verkstadsgatan 13  
S-542 33 Mariestad  
Tel.: +46 501 39 33 40  
Fax: +46 501 39 33 41  
info@exhausto.se  
www.exhausto.se

### **EXHAUSTO Suomi**

Nummiperkontie 21  
FI-21250 Masku  
Tel.: +358 45 113 2628  
Fax: +358 2 432 0013  
info@exhausto-ventilation.fi  
www.exhausto-ventilation.com

### **INATHERM B.V.**

Vijzelweg 10  
NL-5145 NK Waalwijk  
Tel.: +31 416 317 830  
Fax: +31 416 342 755  
sales@inatherm.nl  
www.inatherm.nl

### **BM Vallá hf**

Stórhöfda 23  
IS-110 Reykjavik  
Tel.: +354 530 3400  
Fax: +354 530 3401  
bmvalla@bmvalla.is  
www.bmvalla.is

### **EXHAUSTO Ventilation Ltd.**

Unit 1, Pelham Court, Pelham Place  
Broadfield - Crawley  
West Sussex - RH11 9SH  
Tel. +44 (0) 1293 511555  
Fax +44 (0) 1293 533888  
info@exhausto-ventilation.co.uk  
www.exhausto-ventilation.co.uk