

EXact2 HMI2-350-TOUCH Control System Basic instructions for VEX240-250-260-270-280





Original instructions

EXHAUSTO A/S Odensevej 76 5550 Langeskov, Denmark Tel.: +45 65 66 12 34 Fax: +45 65 66 11 10 exhausto@exhausto.dk www.exhausto.dk



Symbols and so	oftware version	
•	Symbols used in these instructions	4
	Software version	
	Software version	4
1. Menu structure		
	1.1. Overview of menus and user levels	5
2. User mode		•
2.0001 111000	2.1. Operation	6
	2.1.1. Use of control icons in the menus	
	2.2. Overview of HMI icons	
3. Technician and		
	3.1. Passwords technician and service levels	٩
	Menu 3.2 - Selecting language	
	Menu 3.2.1 - Setting date and time	
	Menu 3.2 - Reset settings	
	Menu 3.2 - Reload database	
	Menu 3.6 - Web server	
	Menu 3.7 - Backup/restore	
	3.2. IMPORTANT when servicing	
	3.2.1. Additional service HMI panel	
4. Starting up the		
	4.1. Getting started	16
	Start configuration	
	Menu 3.4 - Accessories	
	Menu 3.4 Connecting heating and cooling units	
	Menu 3.5 BMS	
	Menu 3.5 - BMS	
	4.2. What is an indoor air quality level?	
	Menu 1 - Selecting operating mode	
	Menu 3.1.1 - Operating settings - Air regulation	
	Menu 3.1.1 - Operating settings Balance	
	Menu 3.1.1.5 Regulators	
	Menus 3.1.1.1.1 to 3.1.1.1.4 Setting the selected indoor air quality leve	
	Menu 3.1.1.1.x - Air set point	
	Menu 3.1.1.1.x - Temperature set point	
	Menu 3.1.1.1.x - Absolute/Relative temperature	27
	Menu 3.1.1.1.x - Cooling relative start	27
	Menu 3.1.1.1.x - Heating relative start	
	Menu 3.1.1.1.x - Cooling absolute start	28
	Menu 3.1.1.1.x - Heating absolute start	
	Generally on temperature regulation	28
	Menu 3.1.8 - Temperature limits	
	Menu 3.1.1.1.x - Supply air regulation, absolute	30
	Menu 3.1.1.1.x - Room temperature regulation, absolute	
	Menu 3.1.1.1.x - Supply air regulation, relative	32
	Menu 3.1.1.1.x - Room temperature regulation, relative	
	Menu 3.1.1 - Operation settings - Temperature regulation	
	Compensation	
	Menu 3.1.2 - Air compensation	
	Menu 3.1.2.1 - CO2 compensation	
	Menu 3.1.2.2 - Humidity compensation of airflow	
	Menu 3.1.2.3 - Airflow reduction	
	Menu 3.1.2.4 - Outdoor compensation of airflow	
	Menu 3.1.3 - Temperature compensation	
	Menu 3.1.3.1 - Outdoor air temperature compensation	
	Menu 3.1.3.2 - Summertime compensation	
	Menu 3.1.4 + Menu 8.1 - Filter (monitoring in case of pressure)	
	Menu 3.1.5 - Night-time cooling	
	Menu 3.1.6 - Cold recovery Menu 3.1.7 - Fan limits	
		44

Manu 2.4.0. Termeneture limite for supply sin and response	
Menu 3.1.8 - Temperature limits for supply air and room	
Room temperature limits	
Menu 3.1.9 - MXHP settings	
Menu 3.1.10 - MCOCW settings Menu 5 - Time and weekly plan	
Menu 5.1 - Date and time	
Menu 5.1 - Date and time	
Menu 7 - Safety functions	
Menu 7 - Salety functions Menu 7.1 - Fire alarm	
Menu 7.2 - Frost protection of HCW	
•	
5. Operation	50
Menu 2 - Operating readings	
Menu 2.1 - Air temperatures	
Menu 2.1.1 - Set points for regulators	
Menu 2.2 - Airflows	
Menu 2.3 - Motor controller parameters (MC parameters)	
Menu 2.4 - Temperature regulating units	
Menu 2.5 - Pressure	
Menu 2.6 - Heating coil	
Menu 2.7 - CH cooling unit	
Menu 2.8 - CCW cold water coil	
Menu 2.9 - CU cooling unit	
Menu 2.10 - MXCU external cooling unit	
Menu 2.11 - External cooling/heating pump unit MXHP	
Menu 2.12 - Hour meters	
Menu 2.13 - CO2/RH sensors (if mounted)	
Menu 6 - Versions	54
Menu 6 - Versions Menu 8 - Service	54 55
Menu 6 - Versions Menu 8 - Service Additional service HMI panel	54 55 56
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022	54 55 56 58
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start	54 55
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start Menu 8.3.1 Fans	54 55 56 58 58 58 58 58
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start Menu 8.3.1 Fans Menu 8.3.2 Recovery	54 55 56 58 58 58 58 58 58
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start Menu 8.3.1 Fans Menu 8.3.2 Recovery Menu 8.3.3 Heating unit	54 55 56 58 58 58 58 58 58 58 58
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start Menu 8.3.1 Fans Menu 8.3.2 Recovery Menu 8.3.3 Heating unit Menu 8.3.4 Cooling unit.	54 55 58 58 58 58 58 58 58 58 59 59
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start Menu 8.3.1 Fans Menu 8.3.2 Recovery Menu 8.3.3 Heating unit Menu 8.3.4 Cooling unit Menu 8.3.5 Dampers and relays	54 55 56 58 58 58 58 58 58 59 59 59 59
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start Menu 8.3.1 Fans Menu 8.3.2 Recovery Menu 8.3.3 Heating unit Menu 8.3.4 Cooling unit Menu 8.3.5 Dampers and relays Menu 8.4 - Calibrating MPT	54 55 56 58 58 58 58 58 58 59 59 59 59
Menu 6 - Versions	54 55 56 58 58 58 58 58 58 59 59 59 59 60
Menu 6 - Versions	54 55 56 58 58 58 58 58 58 59 59 59 59 60 61
 Menu 6 - Versions	54 55 58 58 58 58 58 58 58 59 59 59 59 60 61 61
6. Alarms 6. Ala	54 55 58 58 58 58 58 58 58 59 59 59 59 60 61 61 61 62
 Menu 6 - Versions	54 55 58 58 58 58 58 58 58 59 59 59 59 60 61 61 61 62
Menu 6 - Versions	54 55 58 58 58 58 58 58 59 59 59 60 60 61 61 62 63
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022. Menu 8.3 - Forced start Menu 8.3.1 Fans. Menu 8.3.2 Recovery. Menu 8.3.3 Heating unit. Menu 8.3.4 Cooling unit. Menu 8.3.5 Dampers and relays. Menu 8.4 - Calibrating MPT 6. Alarms 6.1. Alarms and info (Menu 4) 6.2. Reset alarms. 6.3. Alarm display and Current list – cause of error. 6.4. List of alarms. Appendix 1 - Simplified diagrams Simplified diagrams.	54 55 56 58 58 58 58 58 59 59 59 60 60 61 61 62 63
Menu 6 - Versions	54 55 58 58 58 58 58 58 58 59 59 59 59 60 60 61 61 61 61 61 61 61 61 101
Menu 6 - Versions	54 55 58 58 58 58 58 58 59 59 59 59 60 60 61 61 62 63 61 101 101
Menu 6 - Versions	54 55 58 58 58 58 58 59 59 59 59 60 60 61 61 62 63 63 101 101
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start Menu 8.3.1 Fans Menu 8.3.2 Recovery Menu 8.3.3 Heating unit Menu 8.3.4 Cooling unit Menu 8.3.5 Dampers and relays Menu 8.4 - Calibrating MPT 6. Alarms 6.1. Alarms and info (Menu 4) 6.2. Reset alarms 6.3. Alarm display and Current list – cause of error 6.4. List of alarms Appendix 1 - Simplified diagrams Simplified diagrams for unit with chiller VEX240-250-260-270L fan placement 1 VEX240-250-260-270L fan placement 2	54 55 58 58 58 58 58 59 59 59 59 60 60 61 61 61 61 61 61 61 61 101 101 1
Menu 6 - Versions	54 55 58 58 58 58 58 59 59 59 59 60 60 61 61 61 61 61 61 61 61 101 101 1
Menu 6 - Versions Menu 8 - Service Additional service HMI panel Menu 8.2 - VDI 6022 Menu 8.3 - Forced start Menu 8.3.1 Fans Menu 8.3.2 Recovery Menu 8.3.3 Heating unit Menu 8.3.4 Cooling unit Menu 8.3.5 Dampers and relays Menu 8.4 - Calibrating MPT 6. Alarms 6.1. Alarms and info (Menu 4) 6.2. Reset alarms 6.3. Alarm display and Current list – cause of error 6.4. List of alarms Appendix 1 - Simplified diagrams Simplified diagrams for unit with chiller VEX240-250-260-270L fan placement 1 VEX240-250-260-270L fan placement 2	54 55 56 58 58 58 58 59 59 59 60 60 61 61 61 62 63 63 101 101 101 101 101 102

Symbols and software version

Symbols used in these instructions



Failure to observe instructions marked with a prohibition symbol may result in serious or fatal injury.

Danger symbol

Prohibition symbol

 \wedge

Failure to observe instructions marked with a danger symbol may result in personal injury and/or damage to the unit.


Software version

Software version

This manual applies from the following version: AHUC: 3.11.1.0 HMI: 4.1.0.0

1. Menu structure

1.1 Overview of menus and user levels

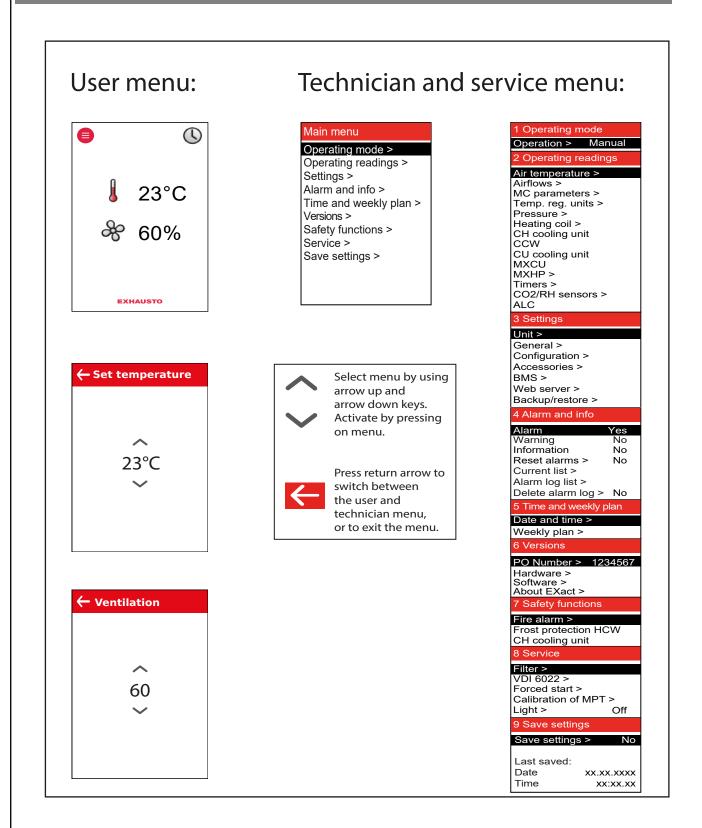

2. User mode

2.1 Operation

2.1.1 Use of control icons in the menus



HMI - <u>H</u>uman <u>M</u>achine <u>I</u>nterface panel

Control icon	Used for
e	Menu icon
\sim	Navigation arrows up and down as well as setting values.
\bigcirc	Approve icon for selection.
\times	Undo icon.
←	Switch between daily user menu and technician/serv- ice menu. Exit a menu without making changes

2.2 Overview of HMI icons

lcon	Description
B	Manual operation
ß	Timer overridden until next changeover in the timer schedule
	Timer, current indoor air quality level is comfort
	Timer, current indoor air quality level is economy
	Timer, current indoor air quality level is standby
	Timer, VEX/CX has stopped
	Timer, no changeover times defined in timer schedule
BMS	BMS-controlled operation
AUX	Externally-controlled operation
	Setpoint for temperature shown in °C
æ	Setpoint for ventilation shown as percentage: 0% = no ventilation OFF = Unit is switched off - timer operation cannot start up unit
	BMS or Web server-controlled system overrides the OFF func- tion. This means the system may start up even if set to OFF
	The unit is running de-icing (De-ice)
	Unit alarm. Contact the service technician who can help reset the alarm. Icon is also shown in the technician menu
	Warning. Contact the service technician who can help reset the warn- ing. Icon is also shown in the technician menu
Temporarily in service	Service display connected

lcon	Description
	External start/stop disconnected. See Electrical Installation Guide for further information
*	Summertime
**	Wintertime
	No communication on the external BUS, or communication between the VEX/CX and HMI is disconnected
Fire!	Fire alarm. Closed circuit open and the pre-set fire alarm function activated
Loading Linux	Startup: Web server accessing database. The icon is displayed until the HMI panel is ready for use.

3. Technician and service levels

3.1 Passwords technician and service levels

	Step	Action	The display shows
21°C	1	If the display is in stand-by: Press the display to activate full light.	
OFF		Press the menu icon	↓ 21°C& OFF
			EXHAUSTO
	2	Press the number in the code row to activate and select the number via the up/down arrows	Password
		\sim	0000
		When the whole number code has	
		 been selected, approve with The code for technician mode is<u>1111</u> (some menus are hid- den or read-only). EXHAUSTO recommends this mode be used for normal service tasks 	Password
		 The code for the specialist level is <u>3142</u> (full access to all menus). 	1111
		NB: incorrect set- tings (wrong values) may have a negative impact on unit operation in some me- nus	

Step	Action	The display shows
3	Press the up/down ar- row keys to find and select the de- sired function in the main menu.	Main menu Operating mode > Operating readings > Settings > Alarm and info > Time and weekly plan > Versions > Safety functions > Service > Save settings >
	utomatically logs out and returns to the	e user menu if no buttons are

Menu 3.2 - Selecting language

The HMI is factory set to English – another language can be selected by:

Step	Action			
Ur C Ad B! W	Settings hit > eneral > onfiguration > ccessories > MS > eb server > ackup/restore >	3.2 General Date and time > Language > English Reset settings > Reload database >	Main menu Operating mode > Operating readings > Settings > Alarm and info > Time and weekly plan > Versions > Safety functions > Service > Save settings >	
1	Select "Setti	Select "Settings"		
2	Select "Gene	Select "General"		
3	Select the re	Select the required language in line 2 "Language"		
4	Return to the	Return to the main menu and select yes in "Save settings"		

Menu 3.2.1 - Set	ting date and	time
	Step	Action
	Unit Gen Con Acc BMS Wet	Language > English Day > Wednesday figuration > Reset settings > Time > 13:11 essories > Reload database > 13:11
	1	Select"Settings"
	2	Select "General"
	3	Select "Date and time" to set these parameters in Menu 3.2.1
	4	Return to the main menu and select yes in "Save settings"
Menu 3.2 - Rese	et settings	
NB:	which menus are	t settings" resets the user settings. See the menu guide for details of e affected. s cannot be undone and the VEX/CX restarts.
	3.2 General Date and time > Language > Engli Reset settings > Reload database >	ish
Menu 3.2 - Relo	ad database	
	Selecting "Rese which menus are	t settings" resets the user settings. See the menu guide for details of e affected.
Database reloads	Waiting for data Loading DB values	
	EXHAUSTO	

Menu 3.6 - Web server

Contact the network administrator for information on the correct IP address, etc. If the admin password is lost, it can be reset to the factory setting. But note that this cannot be reversed. See EXact web server instructions.

3.6 Web server		
DHCP > No		
IP address		
> 192.168.001.180		
Subnet mask		
> 255.255.255.000		
Standard gateway		
> 192.168.001.001		
Port number > 80		
MAC address		
00:1F:79:00:00:D0		
Reset password > No		

Menu 3.7 - Backup/restore

It is recommended that a backup copy of the VEX/CX settings is made and saved in a secure location. See the individual backup guidelines in the diagram:

	1
+	 Backup via the HMI panel Insert the USB plug in one of the web server sockets Select menu 3.7 Backup/restore It can take up to 20 seconds before the connection to the USB is established; data will be lost if the process is interrupted. The backup file can only be saved on a USB plug. Once the file has been saved it is not possible to change the file name or type. The file is named automatically as in this example: backup_20110918.file
	Backup via web server Follow the backup/restore instructions in the web server guide. The backup file may be saved on any medium (USB, PC etc.). A backup file saved via the web server may be renamed, but the file type cannot be changed.
	Note: If a backup file has been saved from the web server and then renamed, it cannot be retrieved (restored) via HMI until the name has been changed back to the standard form, see "Via HMI panel".
	If it is necessary to make backup files for several VEX/CX, it is recommended that each file is saved on a separate USB stick, or to create one folder per VEX /CX in which the backup files are saved.

3.2 IMPORTANT when servicing

Do not open



the service doors before the supply voltage has been disconnected at the isolation switch. The isolation switch is located on the left side of the connection box on top of the air handling unit.



Weekly plan



It is important to set ventilation to OFF when the weekly plan is active:

Set ventilation to OFF	
Note - If the HMI panel shows 0% (VEX/CX is inactive) and the unit is operating to a weekly plan when servicing begins, there is a risk that the program may be changed by timer operation and re-start the VEX unit.	21°C
 Log on to technician menu, using password 1111 Change to manual operation via menu 1 Change back to user menu The icon for manual operation appears in the right-hand corner of the menu 	ß
 Press the ventilation icon Set the ventilation to 0% using the arrows Press approve 	 23°C 23°C 0%
• OFF will now appear on the display next to the ventilation icon	Solution


BMS unit or Web server




If the VEX/CX is controlled via a BMS or Web server, these controls could override the OFF function and the VEX/CX may start up irregularly. To disconnect the BMS or WEB server connection, you must remove the plug from the EXact2 main board. Refer to the section on the terminal board in the Electrical Installation Guide.

3.2.1 Additional service HMI panel

If the HMI panel is located far from the VEX/CX, it is recommended that an auxiliary HMI panel be connected to the VEX/CX in the connection box.

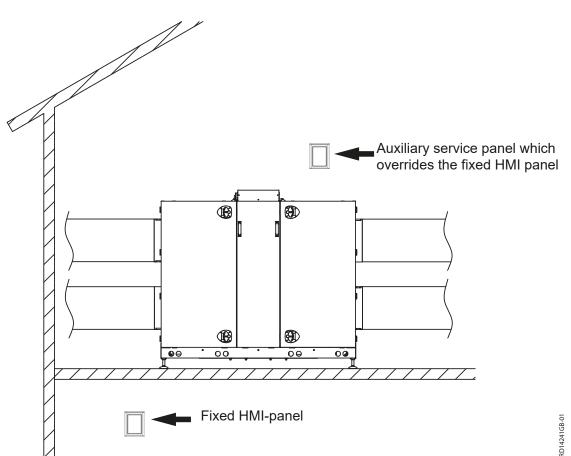

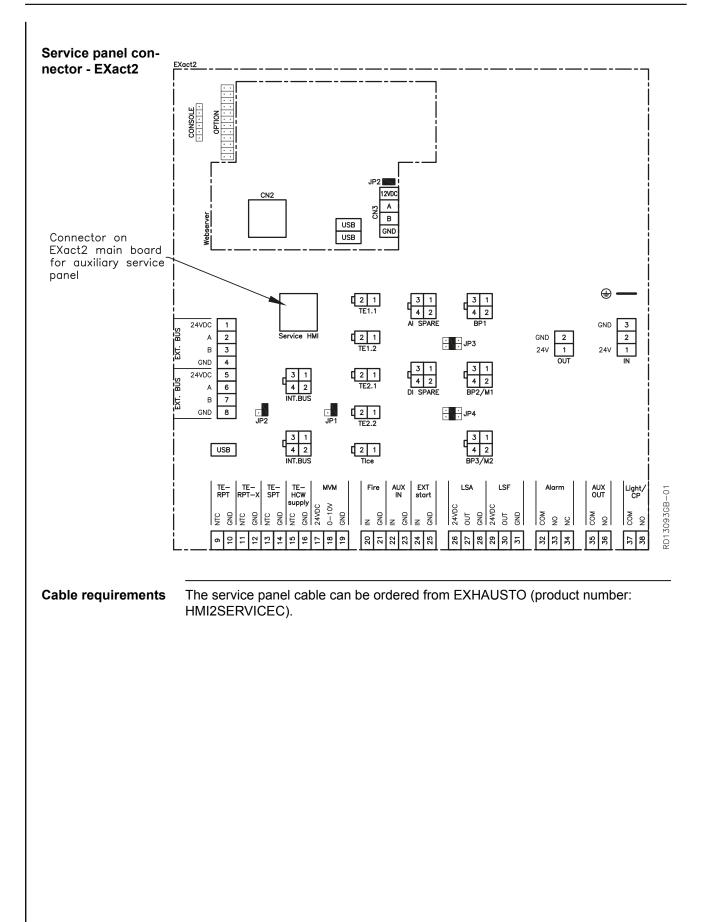

4. Starting up the unit for operation



The Modbus connectors must not be connected or removed while the units are powered up. Both Modbus units must be switched off before making changes, otherwise the units may be damaged.

 \triangle

During commissioning, it may be necessary to work with the control system boxes open. Components in these boxes must only be touched with electrically-insulated tools.



Before doing any work on motor controls or motor cables and terminal boxes, the power supply must be switched off for at least five minutes to allow the capacitors to discharge.

Before commissioning begins

- Check that the supply voltage is connected
- Set the HMI panel to specialist mode. See section 2.2

4.1 Getting started


From the main menu, follow the steps below to start the commissioning process.

Commissioning

Step	Action	Menu
1	Configure any external accessories or units (heating or cooling coils, chiller, sensors, etc.)	3.4
2	Select operating mode - Manual operation is the recommended setting during commissioning.	1
3	Set/activate operation settings	3.1
4	Program weekly plan	5.2
5	Set safety function settings	7
6	Select operating mode - change to timer operation if re- quired	1

The various menu items are explained later in this section.

REMEMBER - Save After changing menu settings it is always important to return to the main menu to save your settings by selecting "Save settings" in menu 9 (select yes). If power is disrupted before the settings are saved, the changes must be re-entered.

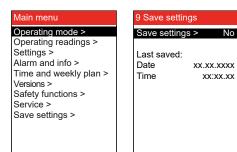



Start configuration

Step	Action
1	Check that the correct configuration for the VEX/CX has been selected at the factory via menu 3.3.
2	Check that all accessories have been configured in menu 3.4
3	If the CO_2 sensor has been mounted, check in menu 3.1.2.1 " CO_2 compensation", whether CO_2 compensation has been activated.
4	If the humidity sensor (RH sensor) has been installed, check that humidity compensation has been activated in menu 3.1.2.2 "Humidity compensation".
5	Go to menu 4.5 "Current list", and check whether any units from the configuration menu are reporting errors. The alarm icon is visible on the user menu interface.
6	If a unit is reporting an error but has been correctly config- ured, check the installation.

3.3 VEX configura	ition
VEX-type >	200
VEX-size >	x40
Fan positioning >	1
Direction >	Right
Rotor type >	Cond.
Cleaning zone >	None
Heating coil >	HCE
Cooling unit >	CCW
Power step HCE >	× 1
PIR >	Active
	Room
BMS >	None

Line in menu 3.3	Factory-set and should not be changed.	Remarks:
Туре	Х	
Size	х	
Fan location	х	
Direction		Adjustable. See section se- lecting Left/Right
Rotor type	Х	
Cleaning zone	Х	

Menu 3.4 - Accessories

3.4 Accessorie	s
Ice-detect. >	Pressure
De-icing metho	od > 0
Heating coil >	MHCE
Cooling unit >	None
Power step HC	CE > 4
Filter detect. >	Timer
PIR >	PIR1
TS >	TS Room
CO2 >	MIOCO2
RH >	None
Dining solution	> No
AUX OUT setti	ing > 1
ALC	0
AUX OUT setti	

Line in menu 3.4	Factory-set and should not be changed.	Remarks:
Ice detection method		Should only be changed when ice-detection sensors are ret- rofitted. Options: • Pressure • Tice
De-icing method		Select de-icing method (meth- od no.) for de-icing of heat ex- changer. See section on de- icing on following pages, where the VEX type and asso- ciated de-icing methods are described.
Heating unit		 Options: IHCW (set at the factory for the the EXact2 main board, if the VEX was purchased with HCW) MHCE (Electric heating coil) MHCW (Water heating coil), None
Cooling unit		Options: • CH • CU (cooling unit from EX- HAUSTO) • CCW (cold water coil) • MXCU (external cooling unit) • None
Filter detection	X	Should only be changed when sensors for detecting filter soil- ing are retrofitted. Options: • Pressure • Hours
Power rating step HCE		This menu item is only active if MHCE is selected (Can only be active for VEX340-50-60).


Line in menu 3.4	Factory-set and should not be changed.	Remarks:
PIR		 Activating PIR sensor. Options: Both (Both MIOPIR and PIRB connected) PIR2 (PIRB connected) PIR1 (MIOPIR connected) None When the sensor(s) is/are activated by movement in the room, the VEX will be overridden and set to comfort level. Comfort level will be maintained for the time set on the rear of the sensor (PIRB), after which the VEX will return to the previous indoor climate level. Note: The time interval for MIOPIR is fixed at 10 minutes and cannot be changed).
TS		Activation of external tempera- ture sensor and selection of type. Options: • TS DUCT • TS ROOM • None
CO2		Activation of CO ₂ sensor Op- tions: • BMS • CO2B (sensor connected to AI SPARE) • MIOCO2 • None
RH		Activation of RH sensor. Op- tions: • BMS • RHB (sensor connected to AI SPARE) • MIORH • None
Dining solution		
ALC	x	ALC menu: This is where ALC is activated and deactivated. Other settings should not be changed.

Menu 3.4 Connecting heating and cooling units

Location

A heating coil and a cooling unit can be connected to the VEX. The example below (VEX200) shows the position of the coils in relation to the VEX unit.

RD12313-02

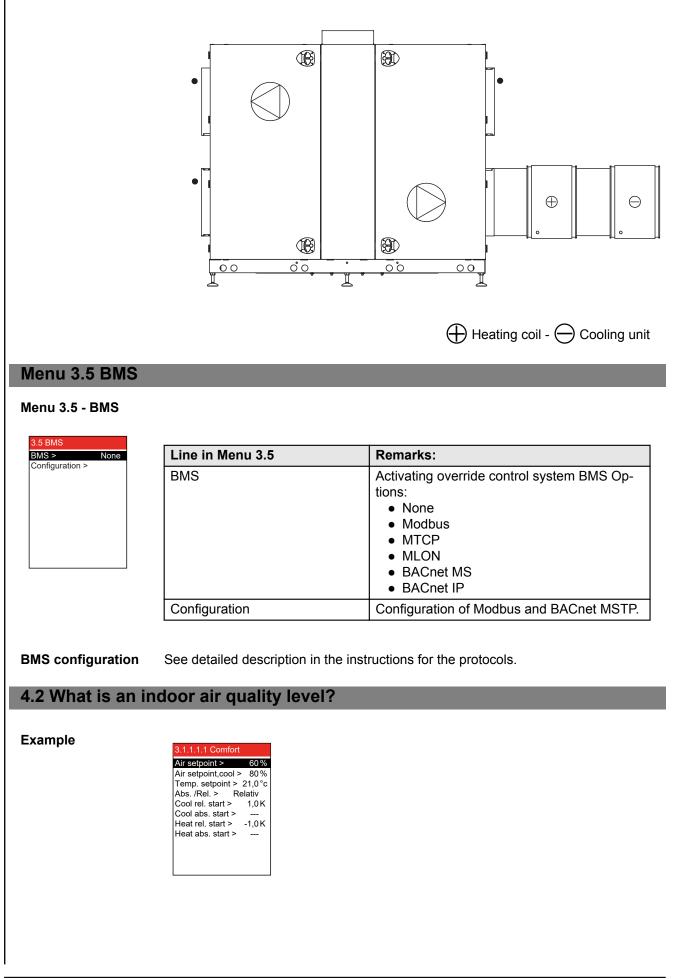

Indoor air quality level definition

The four indoor air quality levels - Comfort, Standby, Economy and Manual - are defined in menus 3.1.1.1.1 to 3.1.1.4. Parameters such as ventilation and temperature set points and control method for a given indoor air quality level are grouped in a menu, as shown in the example above. The table below shows suggested settings for each mode:

Indoor climate levels	Energy sav- ing	People in the room	Air-replace- ment*	Deviation from desired room temperature*
(Ventilation stopped)	-	No	No ventilation	No control of room temperature
Economy Menu 3.1.1.1.3	Large	No	Low	Greatest temperature deviation permitted*)
Standby Menu 3.1.1.1.2	Small	No	Low	Least temperature deviation per- mitted*
Comfort Menu 3.1.1.1.1	None	Yes	High	Precise temperature
Manual Menu 3.1.1.1.4	Dependent on setting	Yes/No	Adjustable	Adjustable

* Air-replacement and temperature deviation set via the HMI panel.

The current indoor air quality level can be controlled in five ways:

- Via a weekly plan, based on the given operating requirements. Set via the HMI panel.
- Via an HMI panel in the room.
- Via sensor(s) positioned in the room or in the extract air duct (e.g. MIO-PIR, MIO-CO2, MIO-RH, MIO-TS)
- Via a PC connected to the built-in Web server
- via a high-level control system (e.g. a BMS unit)

NB:

The Comfort indoor climate level is the overall indoor climate level. **The comfort** level is also activated if a mounted PIR sensor gives a signal (the unit changes from an energy-saving indoor climate level/OFF).


Menu 1 - Selecting operating mode

1 Operating mode Operation > Manual

Select	lf
Manual	The unit is intended to always operate at the same indoor air quality level (set in menu 3.1.1.1.4) and operation is controlled manually via the HMI panel or the Web server
Timer	The unit is controlled automatically via a fixed weekly plan

Note for commissioning EXHAUSTO recommends that the operating mode be set to Manual during commissioning and changed to Timer operation when complete. Note for manual

When the unit is operating in Manual indoor climate level, the values set for the temperature setpoint (Temp. setpoint) and Air setpoint are shown immediately in the user menu.

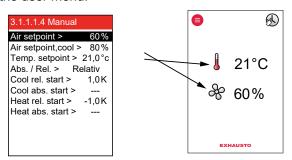


Menu 3.1.1 - Operating settings - Air regulation



The control method can be selected from the methods shown in the table. Note that some of these methods require that an optional pressure sensor is fitted in one or more ducts (MPTDUCT).

Method	Meth- od no. (1-8)	Description	The following parameters are set	Menu
Manual con- trol	1	Constant speed Manual control of fan speed	• Balance	3.1.1 Operating settings IAQ. levels > Temp. reg. > Supply air Air reg. > 1 Balance > 1,0 Regulators >
Airflow con- trol	2	Constant airflow Maintains the airflow, com- pensating for changes in the ducting system, filter soiling, etc.	 Extract airflow values for maximum and min- imum ventilation (see capacity diagram in the VEX/CX instruc- tions) Supply air balance rel- ative to extract air 	3.1.1.4 Constant airflow Setp. maks. > 10000l/s Setp. min. > 0l/s Balance > 1,00
Constant pressure reg- ulation of ex- tract air	3	Constant pressure-regulated extract air with fixed supply air setting Requirements: • MPT-DUCT negative pressure sensor in the extract air duct. Available as an accessory	 Extract airflow values for maximum and min- imum ventilation Fixed setting for sup- ply airflow 	3.1.1.4 Constant pressure Extract air: Setp. max. > 1000Pa Setp. min. > 0Pa Supply air: 0I/s
	5	Constant pressure-regulated extract air with slave-control- led supply air Requirements: • MPT-DUCT negative pressure sensor in the extract air duct. Available as an accessory	 Extract airflow values for maximum and min- imum ventilation Supply air balance rel- ative to extract air 	3.1.1.4 Constant pressure Extract air: Setp. max. > 1000Pa Setp. min. > 0Pa Supply air: 1.00 Balance > 1.00

Method	Meth- od no. (1-8)	Description	The following parameters are set	Menu
Constant pressure reg- ulation of supply air	4	Constant pressure-regulated supply air with fixed extract air setting Requirements: • MPT-DUCT overpres- sure sensor in the supply air duct. Available as an accessory	 Supply airflow values for maximum and min- imum ventilation Fixed setting for ex- tract airflow 	3.1.1.4 Constant pressure Supply air: Setp. max. > 1000Pa Setp. min. > 0Pa Extract air: Setp. > Setp. > 0I/s
	6	Constant pressure regulated supply air with slave-control- led extract air Requirements: • MPT-DUCT overpres- sure sensor in the supply air duct. Available as an accessory	 Supply airflow values for maximum and min- imum ventilation Extract air balance rel- ative to supply air 	3.1.1.4 Constant pressure Supply air: Setp. max. > 1000Pa Setp. min. > 0Pa Extract air: Balance > 1.00
Constant pressure reg- ulation of both extract air and sup- ply air	7	Constant pressure regulation of both extract air and supply air Requirements: • MPT-DUCT negative pressure sensor in the extract air duct. Available as an accessory • MPT-DUCT overpres- sure sensor in the supply air duct. Available as an accessory	 Extract airflow values for maximum and min- imum ventilation Supply airflow values for maximum and min- imum ventilation 	3.1.1.4 Constant pressure Extract air: Setp. max. > 1000Pa Setp. min. > 0Pa Supply air: Setp. max. > Setp. min. > 0Pa Setp. min. > 0Pa
External con- trol of fan speeds	8	External control of both ex- tract air and supply air Requirements: • Two MIO modules to convert 0–10 V to Mod- bus	 FC max/FC min: Control signal range for external control (e.g. 2-10 V signal) Control signal to override external damper* in the event of, e.g. night-time cooling or fire *or other external accessory, which is controlled by external control 	State None BFO BMS

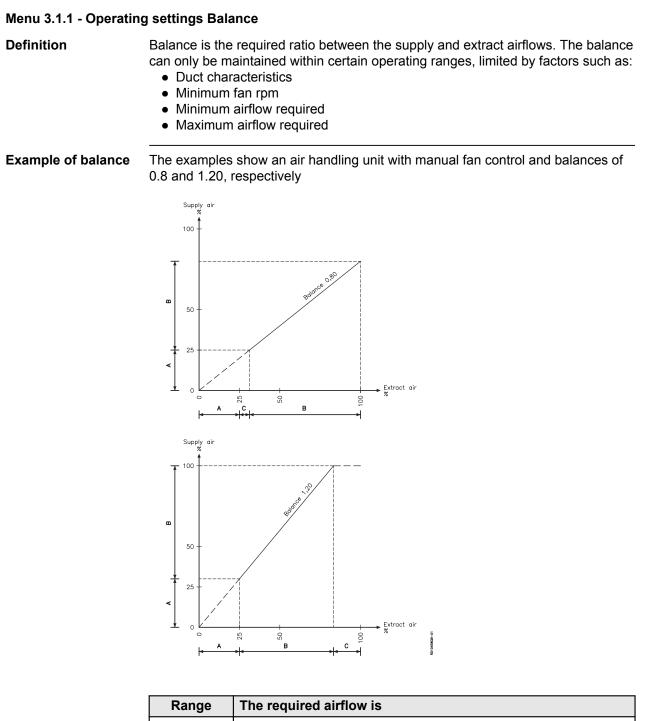

	Range	The required airflow is
	А	outside the unit's normal operating range
Γ	В	balanced
	С	unbalanced

NB:

Less than 1 = less supply air - Greater than 1 = less extract air

Note that with meth- Balance is not active for air regulation methods 3, 4, 7 and 8. **ods 3, 4, 7 and 8**

Menu 3.1.1.5 Regulators

3.1.1.5 Regulators	
Room temperature >	
Supply air temp. >	
Supply airflow >	
Extract airflow >	
Supply pressure >	
Extract pressure >	
Heat retention >	



Kp and Ti settings should only be changed by persons trained in commissioning ventilation systems.

If the following is selected	Permitted operations
Technician mode (code 1111)	Read the settings for the vari- ous regulators
Specialist mode (code 3142)	Set Kp and Ti for the various regulators

Menus 3.1.1.1.1 to 3.1.1.1.4 Setting the selected indoor air quality levels

The menus for the four indoor air quality levels contain the same menu items:

3.1.1.1.1 Comfort	3.1.1.1.2 Standby	3.1.1.1.3 Economy	3.1.1.1.4 Manual
Air setpoint >60 %Air setpoint,cool >80 %Temp. setpoint >21,0 °cAbs. /Rel. >RelativCool rel. start >1,0 KCool abs. start >Heat rel. start >-1,0 KHeat abs. start >	Air setpoint > 60 % Air setpoint,cool > 80 % Temp. setpoint > 21,0 °c Abs. /Rel. > Relativ Cool rel. start > 1,0 K Cool abs. start > Heat rel. start > -1,0 K Heat abs. start >	Air setpoint > 60 % Air setpoint,cool > 80 % Temp. setpoint > 21,0 °c Abs. / Rel. > Relativ Cool rel. start > 1,0 K Cool abs. start > Heat rel. start > -1,0 K Heat abs. start >	Air setpoint >60 %Air setpoint,cool >80 %Temp. setpoint >21,0 °cAbs. / Rel. >RelativCool rel. start >1,0 KCool abs. start >Heat rel. start >-1,0 KHeat abs. start >

Menu 3.1.1.1.x - Air set point

menu

DefinitionUsed to set the desired ventilation level for the given indoor air quality level, from
0 to 100%. Press "OK" to end.Menu 3.1.7 - limitsSee the range limits for fan output in Menu 3.1.7 in the HMI panel.

Menu 3.1.1.1.x - Temperature set point

 Definition
 The required supply air or room temperature is set here. If "Absolute" indoor air quality level is selected (see next section), then the temperature set point can be selected (with 0.5 degree difference) within the configured "Cooling absolute start" and "Heating absolute start" ranges (for more details see relevant section).


 Menu 3.1.8 - limits menu
 See the range limits for supply air temperature and room temperature in Menu 3.1.8 in the HMI panel.

Menu 3.1.1.1.x - Absolute/Relative temperature

Definition Used to select supply air or room temperature in relation to either absolute or relative temperature.

Absolute - Specify start temperature for heating coil or cooling unit.

Relative - Permitted temperature changes relative to the heating coil or cooling unit start temperature. See how the temperature variation follows when the set point is altered (diagram below, dotted lines).

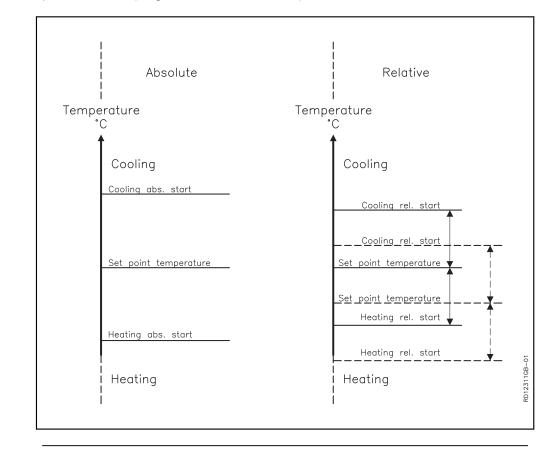

Menu 3.1.1.1.x - Cooling relative start

Definition This value determines when cooling must start in relation to the relative temperature. Low value = narrow temperature regulation range, leading to a comfortable indoor climate. High value = wider temperature regulation range, which provides cooling energy savings. Lower and upper limit is shown in the display.

Example If the required room temperature is 21° C, and Cooling Rel. start in the indoor air quality level menu is set to 3 K, the cooling unit will begin to operate on a warm day when the temperature exceeds 21° C + 3 K = 24° C.


Menu 3.1.1.1.x - Heating relative start

Definition This value determines when the heating coil must start in relation to the relative temperature. Low value = narrow temperature regulation range, leading to a comfortable indoor climate. High value = wider temperature regulation range, which saves energy because of lower heating requirements. Lower and upper limit is shown in the display.

Example	If the required room temperature is 21° C, and Heating Rel. start in the indoor air quality level menu is set to -3 K, the heating coil will begin to operate on a cold day when the temperature falls below 21° C - 3 K = 18° C.
Menu 3.1.1.1.x - Cooli	ng absolute start
Definition	This value determines when cooling must start in relation to the absolute tempera- ture. Lower and upper limit is shown in the display.
Example	If Cooling abs. start is set to 24°C, the cooling unit will first start to operate when the temperature exceeds 24°C, even though the daily user has set the required room temperature to 21°C.
Menu 3.1.1.1.x - Heatin	ng absolute start
Definition	This value determines when heating must start in relation to the absolute tempera- ture. Lower and upper limit is shown in the display.
Example	If Heating abs. start is set to 18°C, the heating coil will not start to operate until the temperature falls below 18°C, even though the daily user has set the required room temperature to 21°C.
Generally on tempera	ture regulation
	 Start by setting the max. and min. limits Set the temperature setpoint For other regulators, first set the max./min. and then the setpoint
3.1.1 Operating settings IAQ. levels > Temp. reg. > Supply air Air reg. > 1 Balance > 1,0 Regulators >	If temperature regulation is changed from Supply Air to Room, the functions on the next pages will be enabled, and invalid values will be adjusted to valid values. If temperature regulation is changed from Room to Supply Air, nothing will hap- pen, as the limits for Room are always within the limits for Supply Air.

Menu 3.1.8 - Temperature limits

3.1.8 Supply air te	mp. limits	
Supply air temp.	limits	
Minimum >	10.0°C	
Maximum >	35.0°C	
Room temp. limits		
Minimum >	10.0°C	
Maximum >	35.0°C	
Maximum ∆T >	10.0K	

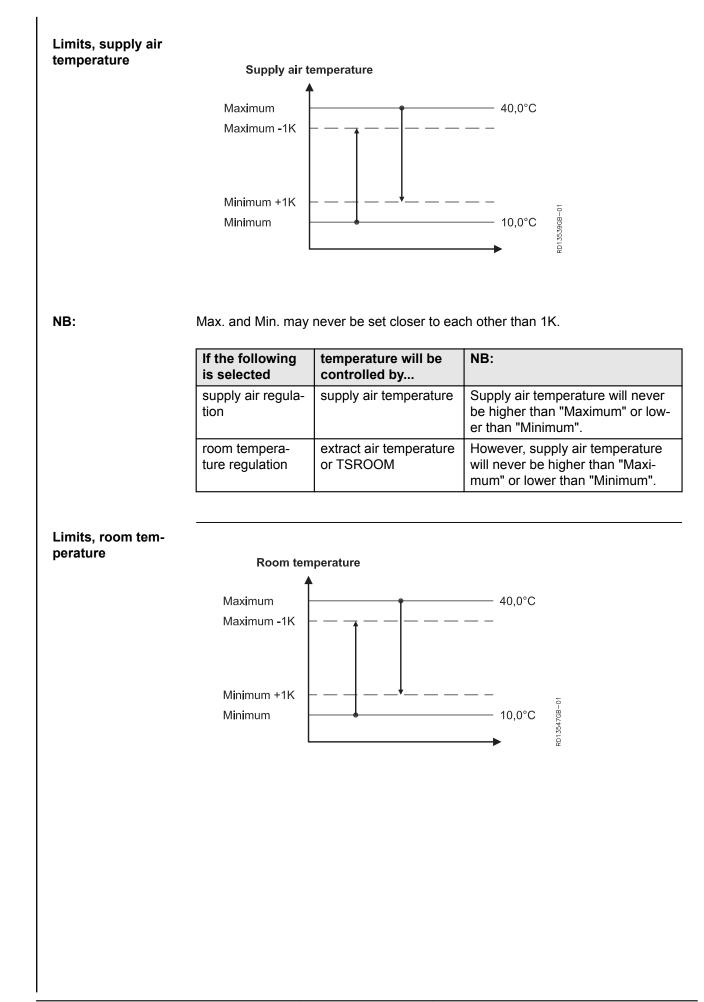

Heating abs. start will automatically rise to

the same value as Minimum supply air

Temp. setpoint will automatically rise to

(Heating abs. start + 0.5 K).


temp.

NB:

Max. and Min. may never be set closer to each other than 1K.

lf	the following will be adjusted
Supply air temp. maximum is set lower than the room temp. maximum.	The room temp. maximum is automatically re- duced to the same value as the supply air temp. maximum.
The supply air temp. mini- mum is set higher than the room temp. minimum.	The room temp. minimum is automatically in- creased to the same value as the supply air temp. minimum.

Menu 3.1.1.1.x - Supply air regulation, absolute

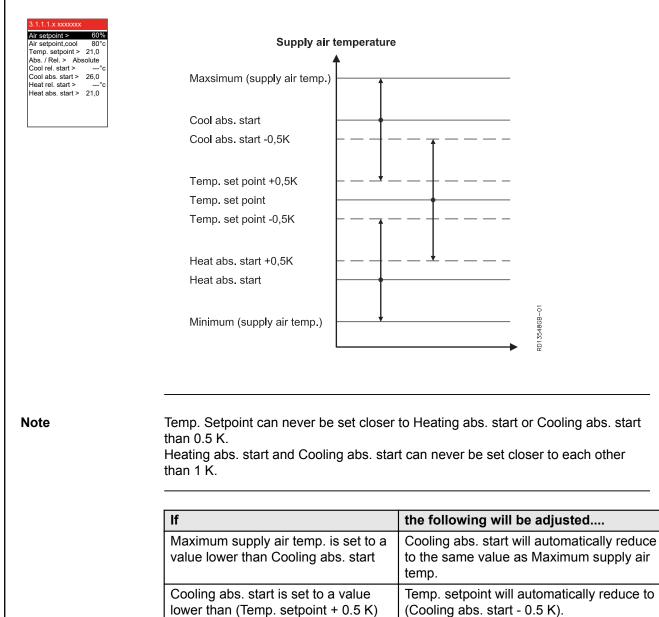


Minimum supply air temp. is set to a

value higher than Heating abs. start

Heating abs. start is set to a value


higher than (Temp. setpoint - 0.5 K)

Menu 3.1.1.1.x - Room temperature regulation, absolute

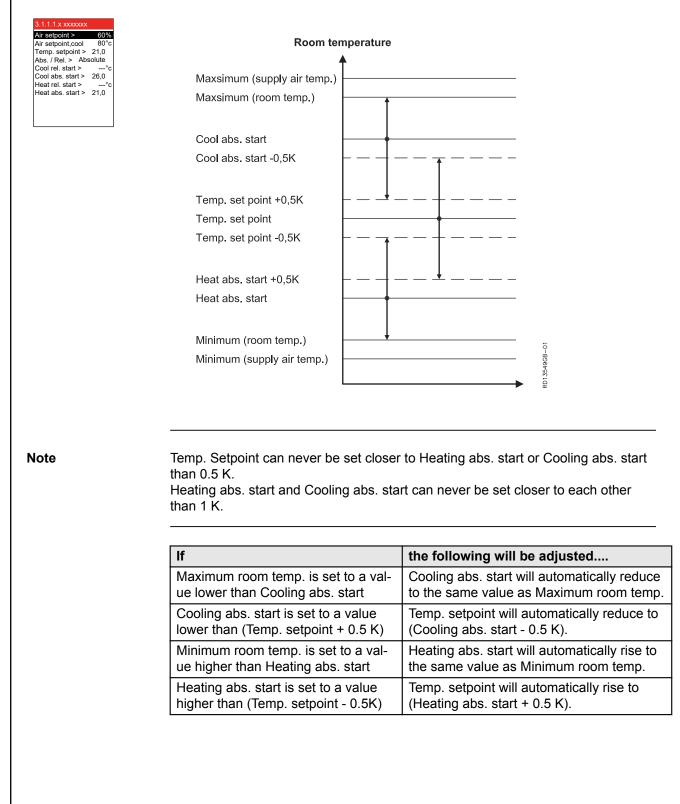


Air setpoint >

Menu 3.1.1.1.x - Supply air regulation, relative

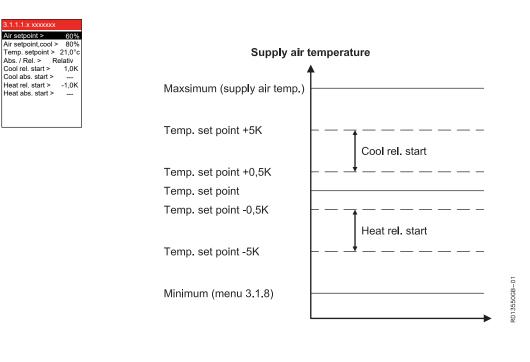


	lf	the following will be adjusted
	Maximum supply air temp. is set to a value lower than (Temp. setpoint + Cooling rel. start) but higher than (Temp. setpoint + 0.5 K).	Cooling rel. start, automatically ad- justed to (Maximum supply air temp. - Temp. setpoint).
	Maximum supply air temp. is set to a value lower than (Temp. setpoint + Cooling rel. start) and less than (Temp. setpoint + 0.5 K).	Temp. setpoint automatically adjus- ted to (Maximum supply air temp 0.5 K). And Cooling rel. start to 0.5 K.
	Minimum supply air temp. is set to a value higher than (Temp. setpoint + Heating rel. start) and greater than (Temp. setpoint - 0. 5K).	Heating rel. start, automatically ad- justed to (Minimum supply air temp Temp. setpoint).
	Minimum supply air temp. is set to a value higher than (Temp. setpoint + Heating rel. start) and less than (Temp. setpoint - 0.5 K).	Temp. setpoint automatically adjus- ted to (Minimum supply air temp 0.5 K). And Heat rel. start to -0.5 K.
Note for Cooling rel. start	The absolute min./max. values for Cooling re (Maximum supply air temp Temp. setpoint) Cooling rel. start is changed to (Maximum su	is less than 5.0 K, the max. value for
Note for Heating rel. start	The absolute min./max. values got Heating rel. start are from -5.0 K to -0.5 K. If (Minimum supply air temperature – Temp. setpoint) is greater than -5.0 K, the min. value for Heating rel. start is changed to (Minimum supply air temperature – Temp. setpoint).	
Example 1:	No limitation from Minimum and Maximum su	ipply air temp.:

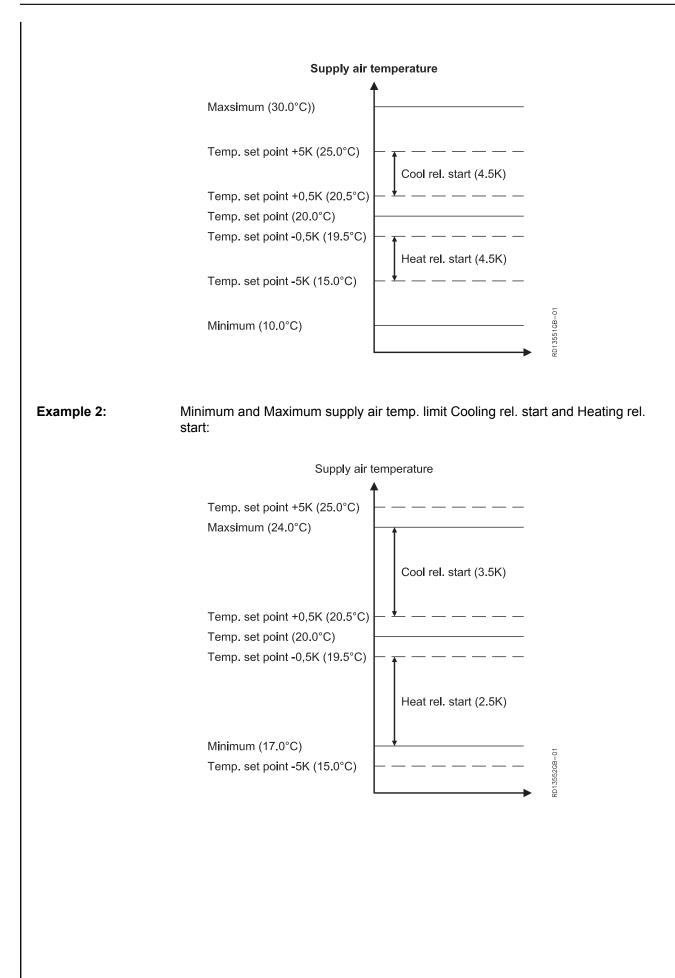


Menu 3.1.1.1.x - Room temperature regulation, relative

Air setpoint > 60% Air setpoint,cool > 80% Temp. setpoint > 21,0°c	Room temp	perature	
Abs. / Rel. > Relativ Cool rel. start > 1,0K Cool abs. start >	Maximum (supply air temp.)		
Heat rel. start > -1,0K Heat abs. start >	Maximum (room temp.)		
	Temp. set point +5K		
	Temp. set point +0,5K	Cool rel.	start
	Temp. set point +0,5K		
	Temp. set point -0,5K		
		Heat rel.	start
	Temp. set point -5K		
	Minimum (room temp.)		
	Minimum (supply air temp.)		RD13553GB-01
			01355
	lf		the following will be adjusted
	er than (Temp. setpoint + Cooling rel. start) but higher than (Temp. setpoint + 0.5 K).justed to (Maximum roo Temp. setpoint).Maximum room temp. is set to a value low- er than (Temp. setpoint + Cooling rel. start) and less than (Temp. setpoint + 0.5 K).Temp. setpoint automa mum room temperature Cooling rel. start to 0.5Minimum room temp. is set to a value high-Heating rel. start, autor		Cooling rel. start, automatically ad- justed to (Maximum room temp Temp. setpoint). Temp. setpoint automatically (Maxi- mum room temperature – 0.5 K).Ar Cooling rel. start to 0.5 K.
			Heating rel. start, automatically ad- justed to (Minimum room temp Temp. setpoint).
	Minimum room temp. is set to er than (Temp. setpoint + Hea and less than (Temp. setpoint	ting rel. start)	Temp. setpoint automatically set to (Minimum room temperature + 0.5 K). And Heating rel. start to -0.5 K.
Note for Cooling rel. start	(Maximum room temperature -	- Temp. setpoir	. start are from 0.5 K to 5.0 K. If at) is less than 5.0 K, the max. value room temperature – Temp. setpoint).
Note for Heating rel. start		setpoint) is gre	. start are from -5.0 K to -0.5 K. If eater than -5.0 K, the max. value for m temp Temp. setpoint).
Example 1:	No limitation from Minimum and	d Maximum roo	om temp.:

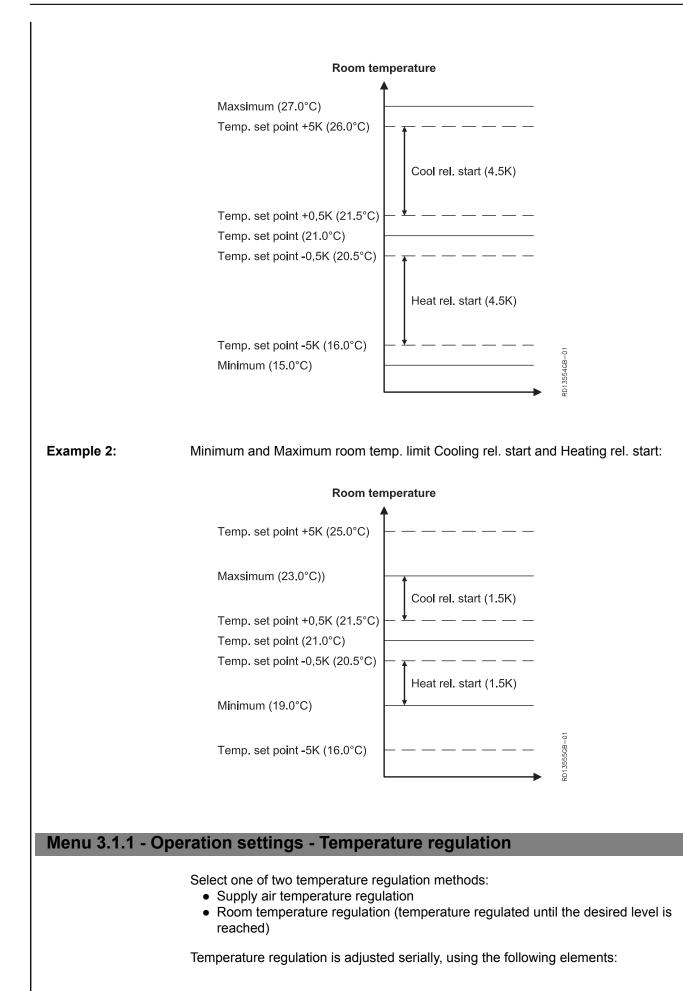


EXHAUSTO

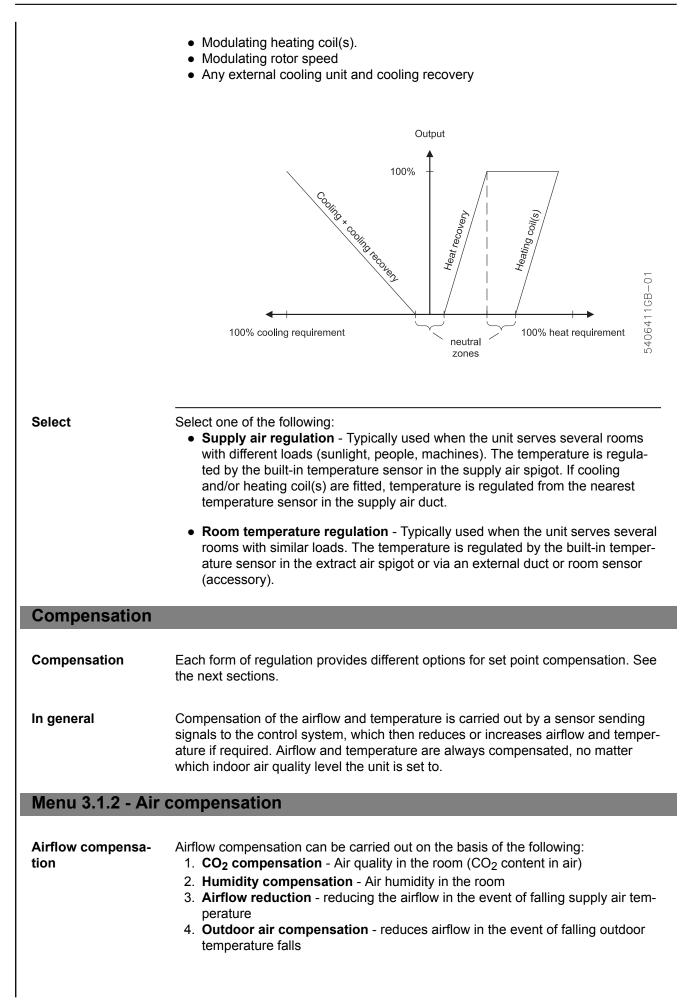


36/108

Note	may ● CO	/ influence the control airflow	ected and active at the same time, and ot be activated if air regulation method	
Autostart with timer operation	If the weekly schedule is at OFF and either the CO_2 or the humidity level exceeds the starting limit for CO_2 or humidity compensation, the VEX/CX will automatically start up using the settings from indoor climate level "Economy".			
Menu 3.1.2.1 - CO ₂ co	ompensat	ion		
Requirements	be mour	nted to allow selection of CO ₂ comp	via AI SPARE, MIO-CO2, BMS) must pensation of the airflow. Connection of tructions accompanying the sensor.	
Function		When the control system is operating, this function can be used to increase the airflow in the event of increasing $\rm CO_2$ levels.		
NB:	• Car	not be activated if air regulation me	ethod 8 is selected.	
Selection of CO ₂ compensation	Activate	in Menu 3.1.3.2.		
Example				
		Airflow	C C C C C C C C C C C C C C C C C C C	
		A B		
		CO ₂ concentration in the air is	Airflow	
	A	less than Start	is the same as set value	
	В	between Start and Maximum	increases gradually to a high level, depending on the current CO_2 level	
	С	greater than Maximum	is increased to maximum air re- placement	

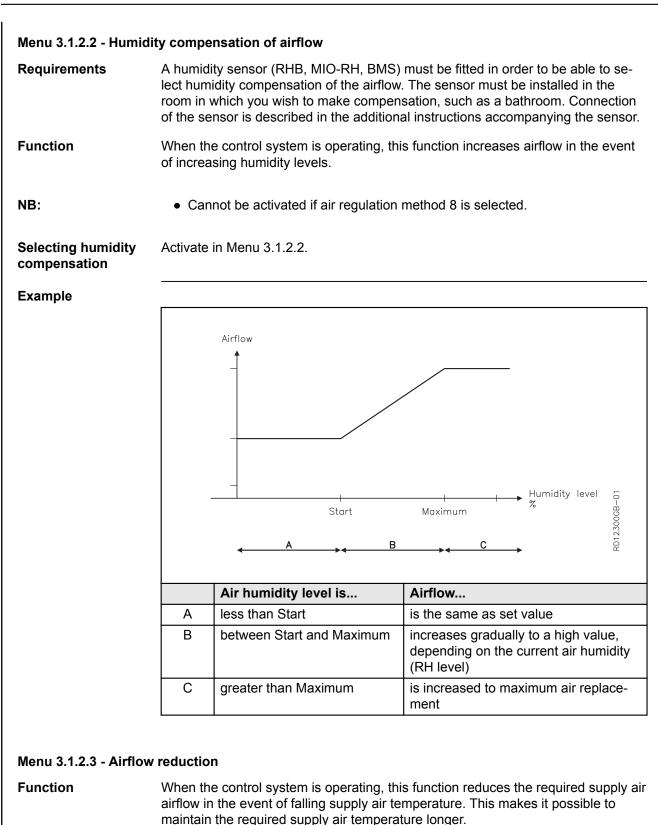

Selecting airflow re- Activate in Menu 3.1.2.3. **duction**

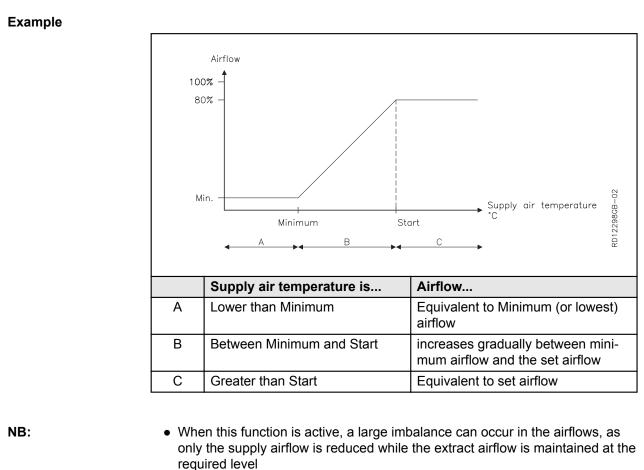

• This function overrides CO₂ and RH sensors.


Menu 3.1.2.4 - Outdoor compensation of airflow

Function When the control system is operating, this function reduces the required airflow in the event of falling outdoor air temperature.

Selecting outdoor Activate in Menu 3.1.2.4. compensation

compensati

Example

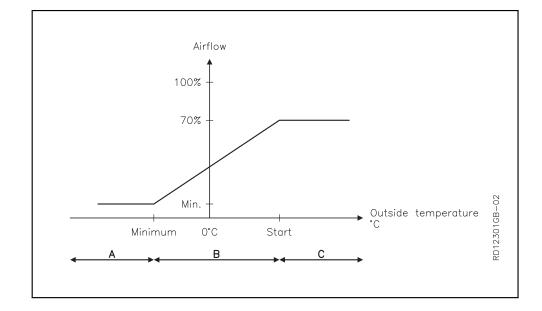

EXHAUSTO

39/108

	Outdoor air temperature is	Airflow
A	Lower than Minimum	Equivalent to Minimum airflow
В	Between Minimum and Start	increases gradually between mini- mum airflow and the set airflow
С	Greater than Start	Equivalent to set airflow

Menu 3.1.3 - Temperature compensation

Menu 3.1.3.1 - Outdoor air temperature compensation

Activate in Menu 3.1.3.1.

Function


The set point for the supply air temperature can be increased if outdoor air temperatures are low. The supply air temperature can be lowered if outdoor air temperatures are high.


NB: This function is active only if supply air temperature regulation is activated for the indoor air quality level in Menu 3.1.1 (Operation settings -> Temp. reg. -> Supply air).

Selecting outdoor air temperature compensation

Outdoor air compensation Outdoor air compensation aims to compensate for the energy that a building either radiates when the outdoor air temperature is low, or absorbs when the outdoor air temperature is high, thus maintaining a constant temperature in the building. If you require outdoor air compensation, select values as indicated below.

Example

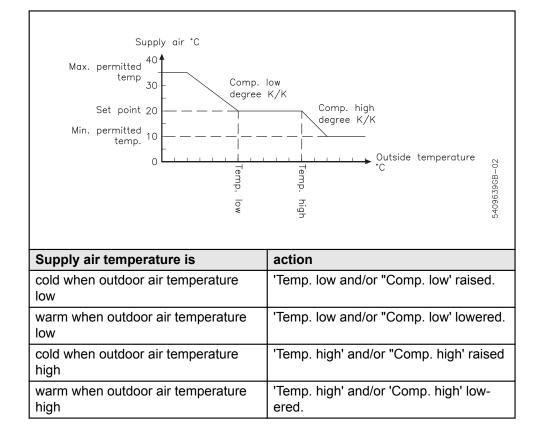

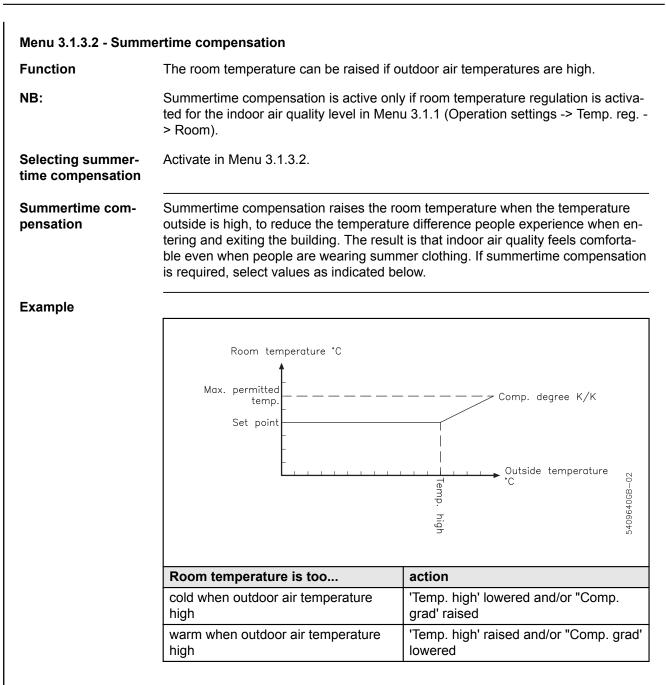

Menu 3.1.4 + Menu 8.1 - Filter (monitoring in case of pressure)

In general

The pressure across outdoor air and extract air filters is monitored by sensors close to the filters. A soiled filter will generate a warning signal, and then an alarm signal, to indicate that it needs replacing.

	re:
Outdoor air	0 Pa
Extract air	0 Pa
Warning:	
Outdoor air >	135 Pa
Extract air >	135 Pa
Alarm:	
Outdoor air >	150 Pa
Extract air >	150 Pa

Current pressure	The current pressure drop across the outdoor air and extract air filters is displayed.	
Warning	Set the supply air and extract air soiled-filter warning level here.	
Alarm	Set the outdoor air and extract air replace-filter alarm level here.	
Menu 8.1	The same settings that can be configured in Menu 3.1.4 can be configured here.	
Menu 3.1.5 - Night-tin	ne cooling	
Function	Night-time cooling is typically used during hot summer periods in buildings which are unoccupied during the night. During hot periods it may be desirable to cool down the building during the night. The aim is to reduce the energy required for cooling during the day by exploiting the lower night-time temperature combined with high air replacement. Night-time cooling involves high airflow ventilation, without turning on the cooling unit.	
Conditions for night-time cooling	 The control system performs a five-minute "test run" to check the following conditions are met before activating the night-time cooling function: Outdoor air temperature must be lower than the room temperature Prior to initiating night-time cooling, there must not have been any heating requirement within a time interval defined in the night-time cooling menu Heating coils and rotor operation must not be active during night-time cooling (does not apply during the test run) As a factory default setting (set in Menu 3.1.5.9 Operation blocking), the night-time cooling function can only be activated if Comfort operation is scheduled for the following day Extract air temperature must be higher than the set point 	
Conditions not met	If the above conditions are not met at the Start time, the control system will per- form a test run once an hour (until an hour before the Stop time) to check whether the conditions for starting night-time cooling can now be met.	
Override	The following can override the night-time cooling function:If the system is controlled by a PIR sensor.If the Manual indoor air quality level is active	
NB: for third-party equipment with damper	If third-party equipment with damper is fitted to the unit, check that it does not impeded air changes when night-time cooling is activated!	

3.1.5 Night-time coolingActive period > SummerSet point > 18°CMin. supply temp. > 10°CΔT max. > 6KΔT min. > 3KStart time > 00:00Stop time > 06:00HC blocking > 60hrPermit night-time cooling >		
Lines in Menu 3.1.5	Function	Factory setting
Operating period	 Select "None" to deactivate night-time cooling. Select "Always" to activate night-time cooling all year round. Select "Summer" to activate night-time cooling during summertime. See summer/wintertime icon on the front of the HMI. 	Summer
Setpoint	Set point for desired room temperature during night-time cooling	18°C
Min. supply air temp.	If the selected minimum supply air temper- ature cannot be met, night-time cooling stops	10°C
ΔT max.	Setting for temperature difference be- tween outdoor air and extract air* when the unit operates with 100% fan speed.	6К
ΔT min.	Setting for temperature difference be- tween outdoor air and extract air*, when the unit operates with 50% fan speed. From Δ Tmin. to Δ Tmax. the fan speed in- creases from 50% to 100%.	ЗК
Start time	Start time for night-time cooling	00:00
Stop time	Stop time for night-time cooling	06:00
HC blocking (heating coil blocking)	Time interval prior to night-time cooling during which there must not have been any heating requirement	60 hr
Permit night-time cooling	Menu 3.1.5.9 is used to configure condi- tions under which night-time cooling is ac- tivated. This menu is dependent on the timer program for the following day	Comfort > Yes Standby > No Economy > No



*The extract air temperature is always used, regardless of whether a room temperature sensor is installed for the system.

Menu 3.1.5.9 - Permit night-time cooling

l- If	is set to	and the indoor air quality level is	is activated
Comfort/Standby Economy	/ Yes	included in the timer pro- gram for the following day	night-time cooling
Comfort/Standby Economy	Yes	not included in the timer program for the following day	no night- time cooling
Comfort/Standby Economy	/ No	included in the timer pro- gram for the following day	night-time cooling
Comfort/Standby Economy	/ No	not included in the timer program for the following day	night-time cooling

Menu 3.1.6 - Cold recovery

Selecting cold re- covery	Activate in Menu 3.1.6.		
Start-up (Start limit)	Cold recovery starts when the configured temperature difference between the room temperature and outdoor air temperature is reached. The factory setting is 3K. Cold recovery operates at 100% when it is engaged.		
Stop	Cold recovery ceases again when the temperature difference between the room temperature and outdoor air temperature is 1K below the configured start limit.		
Operation with CCW,MXCU, MXHP or MCOCW	Recommended that cold recovery is activated if CCW, MXCU, MXHP or MCOCW cooling used.		

Menu 3.1.7 - Fan limits

Function Configuration of minimum and maximum fan output limits (supply air and extract air) as percentages. These are the absolute minimum and maximum fan output limits, i.e. all other menus where fan output can be changed will be limited by the absolute settings.

Example If a user selects maximum fan rpm in the user menu (100% ventilation), fan output will still never exceed the value set in this menu.

Menu 3.1.8 - Temperature limits for supply air and room

Function Configuration of minimum and maximum supply air temperature limits. These are the absolute minimum and maximum supply air temperature limits, i.e. all other menus where supply air temperature can be changed will be limited by the absolute settings.

Example If a user selects maximum temperature in the user menu, the temperature will never exceed the value set in this menu.

Supply air temperature limits Setting Go to menu NB: Lowest permitted supply air tempera-3.1.8 Range: 10.0℃.. 0.250.0℃ ture Range: 30.0℃.. Highest permitted supply air tempera-0.40.0°C ture NB: The settings above must only be changed if special circumstances require it. Otherwise, the factory settings can be used. **Room temperature limits Function** Configuration of minimum and maximum room temperature limits. These are the absolute minimum and maximum room temperature limits, i.e. all other menus where room temperature can be changed will be limited by these settings. Example If a user selects maximum temperature in the user menu, the temperature will never exceed the value set in this menu. **Room temperature** limits Setting Go to NB: menu 3.1.8 Range: 10.0-34.0°C Lowest permitted room temperature Highest permitted room tempera-Range: 11.0 °C..0.35.0°C ture ΔT (difference between supply Allows for prevention of conair and extract air temperature) densation on supply air fixtures and down draught. Range: ΔT : 2.0K...15.0K NB: The settings above must only be changed if special circumstances require it. Otherwise, the factory settings can be used. Menu 3.1.9 - MXHP settings For information on setting the MXHP module, please consult the instructions for the module. Menu 3.1.10 - MCOCW settings For information on setting the MCOCW module, please consult the instructions for the module.

Menu 5 - Time and weekly plan

Menu 5.1 - Date and time

This menu is used to set the current date, day and time.

Menu 5.2 - Weekly plan

Plan type

When "Timer" operation has been selected in Menu 1, the weekly plan must be configured. Select one of the following three plan types:

Plan type	Use when	Program interval
Day	Different programs are required for different weekdays.	Monday, Tuesday, Wednes- day, Thursday, Friday, Sat- urday, Sunday
Week	The same program is required for all days of the week.	Monday to Sunday
5/2	One program is required for Monday to Friday, and another program for weekends.	Weekdays: Monday to Fri- day, Weekend: Saturday and Sunday

Editing

5 Time and weekly plan Date and time > Weekly plan > Output Use kly plan >	5/2 5.2.2 Change Weekday > 1 IAQ. level > Standby 1 Time of day > 06:00 2 IAQ. level > Comfort 2 Time of day > 07:30 3 IAQ. level > Economy 3 Time of day > 17:30 4 IAQ. level > OFF 4 Time of day > 00:00 5 IAQ. level > Inactive 5 Time of day - 00:00 5 Time of day - 00:00		
Menu	Action		
5.2	Select "Weekly plan"		
5.2.2	Select "Editing"		
 If plan type "Week" is se- lected 	start editing in Menu 5.2.2		
 If plan type "Day" or "5/2" is selected 	Go to Menu 5.2.2.1 and start editing		
5.2.2 or 5.2.2.1	Go to 1 Indoor air quality level - select level. Select one of the following: Inactive, OFF, Comfort, Standby, Economy.		
	Go to 1 Time - Select the start time for indoor air quality level 1		
	Complete the rest of the program in the same way. See programming example below		

Program example

	5.2.2.1 Weekday $1 IAQ. level > Standby$ $1 Time of day > 06:00$ $2 IAQ. level > Comfort$ $2 Time of day > 07:30$ $3 IAQ. level > Economy$ $3 Time of day > 17:30$ $4 IAQ. level > COFF$ $4 Time of day > 00:00$ $5 IAQ. level > Inactive$ $5 Time of day:$
Time interval	Indoor air quality level
06:00 - 07:30	Standby
07:30 - 17:30	Comfort
17:30 - 00:00	Economy
00:00 - 06:00	OFF

Menu 7 - Safety functions

Menu 7.1 - Fire alarm

Four operating modes

There are four different operating modes in the event of a fire. The selected operating mode must meet regulatory standards.

Go to menu 7.1 and select mode	Operating mode			
	Fans	LSF	LSA	LS ALC*
1 (factory set- ting)	Supply air and extract air stopped	Closed	Closed	Closed
2	Supply air 100% and ex- tract air stop- ped	Opened	Closed	Closed
3	Supply air stopped and extract air 100%	Closed	Opened	Opened
4	Supply and extract air 100%	Opened	Opened	Opened

*LS ALC is extract air damper for Automatic leakage control

Activation of operating mode The selected operating mode under the function "Fire alarm" is activated if the closed circuit in any of the two inputs Fire and AUX IN on EXact2 main board are broken.



The inputs allow the connection of:

- Smoke detectors
- Fire thermostats (e.g. BT40, BT70 or BT70)
- BMS
- Fire control system

If an input is not used, a jumper must be used (see Electrical Installation Guide)

Menu 7.2 - Frost protection of HCW

Setting of frost pro-

tection

7.2 Frost protection HCW Stop temperature >15°C Warning temp. > 2,0K Number of restarts > 2 Heat retention > 22°C RPT-X fitted > No			
Menu line	Function	Action	
Stop tem- perature	Selection of return water tem- perature setting at which the unit stops and the motor valve fully opens. See table below	 Select the required stop temperature The coldest temperature sensor (TE-RPT or TE-RPT-X) will be utilised. See the temperatures in menu 2.6 	
Warning tempera- ture	Selection of return water tem- perature setting at which air- flow is reduced	 Select the temperature relative to the stop temperature (ΔT) which will generate a frost damage warning and reduce airflow 	
Number of restarts	Up to five restarts may be se- lected	 Select the maximum number of restarts permitted in an hour before an alarm is trig- gered Manual reset is activated by se- lecting "0" for no. of restarts 	
Constant tempera- ture	In the case of a unit being stopped, a selected "constant heating temperature" is main- tained to ensure that the heating pipes stay warm.	 Select the required constant heating temperature 	
RPT-X fit- ted	State if RPT-X is fitted	 If an RPT-X is not required, it may be removed 	
MVM/CP time	Time before MVM valve closes and circulation pump stops when stop temp. or number of restarts has been exceeded.	 Options: - 5 minutes - ∞ (never) 	



Stop temperature

If the return water tem- perature does the fol- lowing within a five-mi- nute period	and total number of restarts	Then
Rises above the constant heating temperature	> 0	Airflow is increased again to the nor- mal operating level
Remains below the con- stant heating temperature	> 0	5 min: After 5 minutes, the MVM valve will close and the CP will stop. The alarm must be reset manually in menu 4. ∞: MVM valve 100% open and cir- culation pump continues operation.

Note

The frost protection function is only active when the outdoor air temperature is below 10° C.


5. Operation

Menu 2 - Operating readings

In general

All of the operating parameters can be read in Menu 2. _ _ is shown in the menu if a given unit is not fitted.


Menu 2.1 - Air temperatures

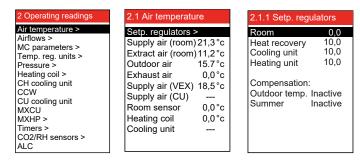


Temperature sensor positioning -VEX200 example

	2.1 Air temperature			
	Setp. regulators >			
Α —	Supply air (room)	21,3°c		
В —	Extract air (room)	11,2°c		
с —	Outdoor air	15,7°c		
D —	Exhaust air	0,0°c		
E	Supply air (VEX)	18,5°c		
F	Supply air (CU)			
)G —	Room sensor	0,0°c		
ла ц —	Heating coil	0,0°c		
''	Cooling unit			
5	-			

*Measured if room sensor TS-ROOM or if the duct sensor TS-DUCT is fitted.

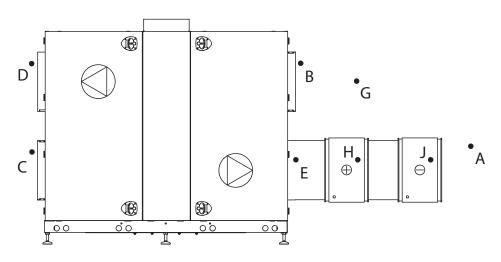

RD12319-02

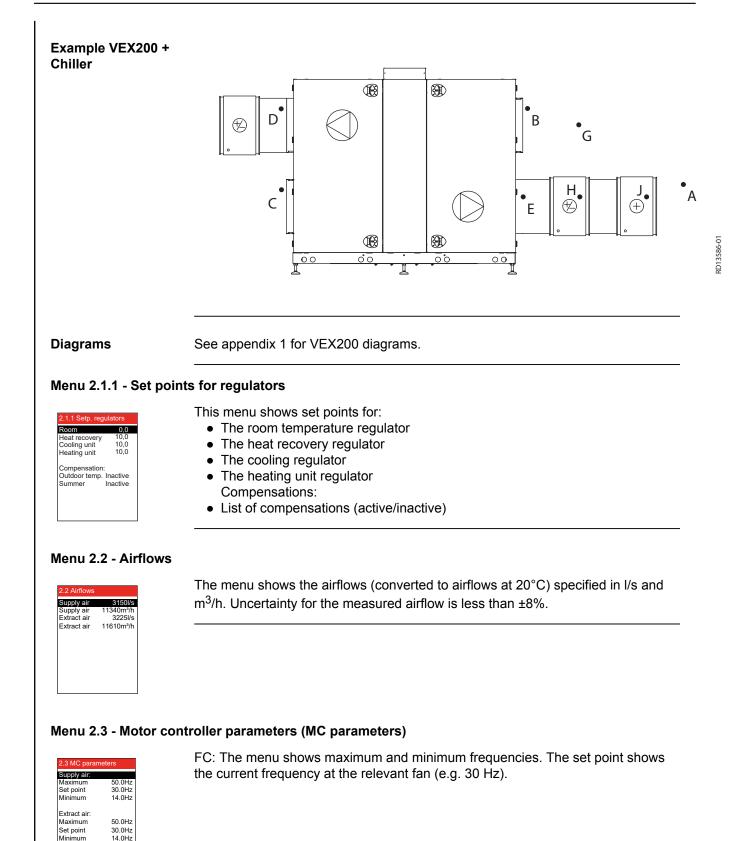

	The menu shows the current:
2.4 Temp. reg. units Heat recovery 0.0%	heat recovery
Heating coil 0.0% Heat pump unit 0.0%	 output of heating coil (if installed)
Cooling unit 0.0% Cooling recovery 0.0%	 output of heat pump unit (if installed)
······	 output of cooling unit (if installed)
	• cold recovery (0% or 100%)
// Annu 2.5 - Pressure	
2.5 Pressure	The menu shows:
External pressure:	 external pressure in supply air and extract air duct (if MPT-DUCT installed)
Supply air duct 0 Pa Extract air duct 0 Pa	 pressure loss across supply air and extract air filters
Filter pressure: Dutdoor air filter 0 Pa	pressure drop across CCW coil in exhaust duct
xtract air filter 0Pa	 current pressure readings for ALC
CCW exhaust 0Pa	
LC pressure:	
Supply chamber 0 Pa	
Supply chamber 0Pa Pressure diff. 0Pa	
Supply chamber 0Pa Pressure diff. 0Pa	
Bupply chamber 0Pa Pressure diff. 0Pa enu 2.6 - Heating c	coil The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories).
upply chamber 0Pa ressure diff. 0Pa enu 2.6 - Heating c B:	The menu displays depend on whether a water heating coil or an electric heating
enu 2.6 - Heating o B: Vater heating coil	The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories).
enu 2.6 - Heating o B: Vater heating coll Vater heating coll	The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows:
enu 2.6 - Heating o B: Vater heating coil Vater heating coil	 The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest)
upply chamber 0Pa essure diff. 0Pa enu 2.6 - Heating c 3: ater heating coil ter heating coil 25.0°C eturn 15.0°C eturn 15.0°C eturn 15.0°C eturn 15.0°C	 The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest) Constant temperature - if the constant temperature function is active (speci-
pply chamber 0Pa essure diff. 0Pa enu 2.6 - Heating c 3: ater heating coil 6 Heating coil tater heating coil ater heating coil tater heating coil tater heating coil ater heating coil	 The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest) Constant temperature - if the constant temperature function is active (specified as a percentage)
Supply chamber 0Pa Pressure diff. 0Pa lenu 2.6 - Heating of B: Vater heating coil Vater heating coil Water heating coil Water heating coil External return 15.0°C External return 15.0°C	 The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest) Constant temperature - if the constant temperature function is active (speci-
Supply chamber 0Pa Pressure diff. 0Pa Menu 2.6 - Heating c IB: Vater heating coil Vater heating coil	 The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest) Constant temperature - if the constant temperature function is active (specified as a percentage)
Supply chamber 0Pa Pressure diff. 0Pa Benu 2.6 - Heating of B: Vater heating coil Vater heating coil Vater heating coil Vater heating coil Vater heating coil Vater heating coil Vater heating coil Pump 0ff	 The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest) Constant temperature - if the constant temperature function is active (specified as a percentage) Pump - if circulation pump in heating circuit is running
enu 2.6 - Heating of B: dater heating coil version of the string coil	 The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest) Constant temperature - if the constant temperature function is active (specified as a percentage) Pump - if circulation pump in heating circuit is running
Aupply chamber 0Pa ressure diff. 0Pa enu 2.6 - Heating of B: Vater heating coil Vater heating coil Vater heating coil Vater heating coil Supply 25.0°C Return 15.0°C Return 15.0°C Return 15.0°C Heat retention 0% Pump Off Pump Off Pump Off Pump Off Pump Coil Return coil Return 15.0°C Return 15.0°C Ret	The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest) Constant temperature - if the constant temperature function is active (specified as a percentage) Pump - if circulation pump in heating circuit is running The menu shows: Number of heating coil power steps Number of active power steps
Supply chamber 0Pa Pressure diff. 0Pa Menu 2.6 - Heating of IB: Vater heating coil Vater heating coil	The menu displays depend on whether a water heating coil or an electric heating coil is installed as a heating unit (see Menu 3.4 Accessories). The menu shows: Supply temperature Return temperature External return water temperature (coldest) Constant temperature - if the constant temperature function is active (specified as a percentage) Pump - if circulation pump in heating circuit is running The menu shows: Number of heating coil power steps

- Modulating step output
- Electric heating coil control box internal temperature

H cooli	
unit	The menu shows:
bar	pressure gas pressure
c c	suction gas pressure
%	 pressure gas temperature supply temperature
	air volume
	balance
	reduction
	 blocked start - if the cooling unit is blocked due to the 10-minute interval be-
	tween starts
	 pressure drop rise
	• CH size
N col	d water coil
	The menu shows:
	 Supply temperature for the cold water coil
	 Pump - whether circulation pump in cooling circuit is running
U cooli	ng unit
cooli	ng unit The menu shows:
cooli	
cooli	 The menu shows: pressure gas temperature pressure gas pressure
cooli	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature
ooli	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant
ooli	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure)
ooli	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval be-
cooli	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure)
	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval be-
	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts
	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating
	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts
C Dar C K	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating
MXCU e	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating
MXCU e	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating
MXCU (The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating Current output of cooling unit
IXCU (The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating Current output of cooling unit
IXCU	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating Current output of cooling unit It cooling/heating pump unit MXHP The menu shows:
A AXCU (The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating Current output of cooling unit Il cooling/heating pump unit MXHP The menu shows: whether the cold/heat pump module is operating
• L	 The menu shows: pressure gas temperature pressure gas pressure Evaporation temperature Reduction - any reduction to cooling output (due to excessive refrigerant pressure) blocked start - if the cooling unit is blocked due to the 10-minute interval between starts external cooling unit The menu shows: If the cooling unit is operating Current output of cooling unit It cooling/heating pump unit MXHP The menu shows:


2.11 Timers Supply air motor 266hr Extract air motor 1256hr Rotor 214hr	The menu shows the hour meters for fan motors and rotor motor.
Menu 2.13 - CO2/RH s	
2.12 CO2/RH sensors CO2 level 0ppm Humidity level 0%RH	 The menu shows: CO₂ level Humidity level (air humidity)
Menu 6 - Versior	าร
PO Number > 1234567 Hardware > Software > About EXact > Menu 6.1 PO num- ber	The menu shows the production order number for the VEX/CX unit.
Menu 6.2 Hardware	The menu shows the hardware version for each unit fitted.
Menu 6.3 Software	The menu shows the software version for each unit fitted.
Menu 6.4 About EX- act	The menu shows system information about the EXact control system.

Menu 8 - Service

Do not open



the service doors before the supply voltage has been disconnected at the isolation switch. The isolation switch is located on the left side of the connection box on top of the air handling unit.

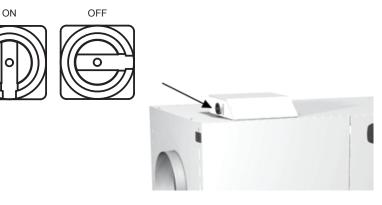

Weekly plan



It is important to set ventilation to OFF when the weekly plan is active:

Set ventilation to OFF	
Note - If the HMI panel shows 0% (VEX/CX is inactive) and the unit is operating to a weekly plan when servicing begins, there is a risk that the program may be changed by timer operation and re-start the VEX unit.	21°C
 Log on to technician menu, using password 1111 Change to manual operation via menu 1 Change back to user menu The icon for manual operation appears in the right-hand corner of the menu 	ß
 Press the ventilation icon Set the ventilation to 0% using the arrows Press approve 	 Зачес 23°С Суба <
• OFF will now appear on the display next to the ventilation icon	Solution


BMS unit or Web server




If the VEX/CX is controlled via a BMS or Web server, these controls could override the OFF function and the VEX/CX may start up irregularly. To disconnect the BMS or WEB server connection, you must remove the plug from the EXact2 main board. Refer to the section on the terminal board in the Electrical Installation Guide.

Additional service HMI panel

If the HMI panel is located far from the VEX/CX, it is recommended that an auxiliary HMI panel be connected to the VEX/CX in the connection box.

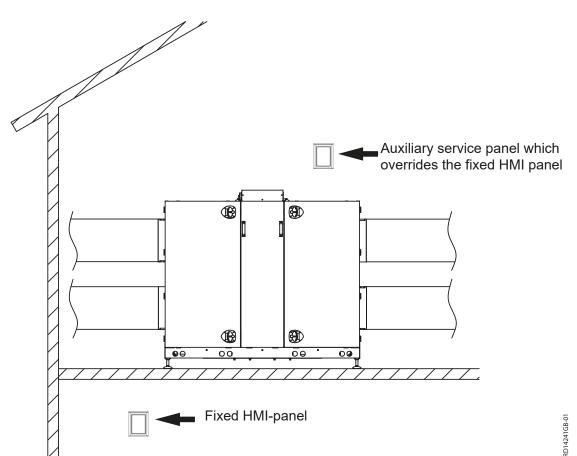

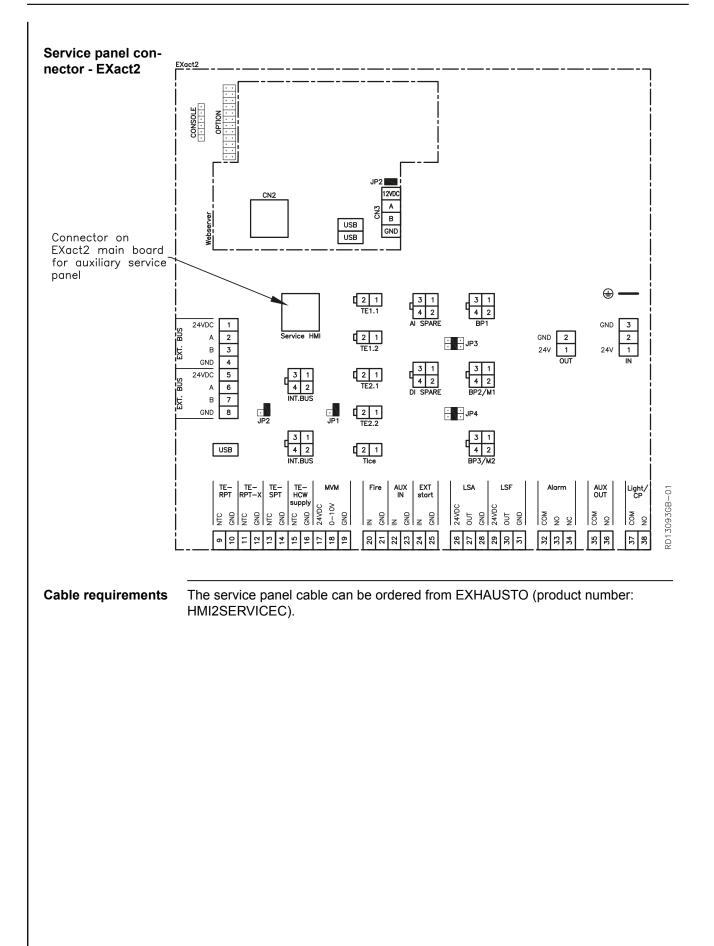

Menu 8.2 - VDI 6022					
Кеу	VDI 6022 is a German hygiene standard.				
Menu	8.2 VDI 6022 Light > Off Filter pressure: Extract air filter 0 Pa Outdoor filter 0 Pa				
Lighting	Switch light on/off (applies only to units ordered with lights. The light in the VEX switches off again when the menu is exited. Not possible in case of iHCW, as the output is used for the circulation pump (CP).				
Filter monitor	Reading for filter pressure loss during operation.				
Menu 8.3 - Forced sta	rt				
Pre-conditions	To use the forced start menu, the unit must be set to OFF in the user menu (Venti- lation).				
NB:	When Menu 8.3 "Forced start" is exited, forced start is reset and normal operation can be resumed. When a submenu is exited, the values in the submenu are reset.				
Menu	8.3 Forced start Fans > Recovery > Heating unit > Cooling unit Dampers and relays > EXEB relays >				
Menu 8.3.1 Fans					
Supply air > 0% Extract air > 0% Error on MC1 No Error on MC2 No	If there are no current faults for the fans ("Fault on MC1 and MC2" shown as "No"), forced start may be activated for the supply air and extract air fans.				
Menu 8.3.2 Recovery					
8.3.2 Recovery Rotor motor 0% Rotation guard 0 Error on unit No	If there are no current faults for the rotor motor ("Fault on unit" shown as "No"), forced start may be activated.				

Rotation control check	 If the rotor is not running: Turn the rotor one revolution by hand. The value shown for rotation control should change each time rotation control is activated 				
Menu 8.3.3 Heating	unit				
8.3.3 Heating unit HCE 0% Supply air 0% Min. flow 0l/s Measured flow 0l/s Run on No Error on unit No	 For electric heating coil HCE: If there are no current faults for the heating coil ("Fault on unit" shown as "No"), forced start may be activated: Start the supply air fan and increase its speed until the measured flow is greater than the min. flow Then start HCE 				
Note	 To avoid the electric heating coil dropping out due to an overheating alarm when the electric heating coil is stopped: Do not exit the menu or stop the supply air fan until <u>Run-on is shown as</u> <u>"No"</u>. 				
8.3.3 Heating unit HCW 0% Error on unit No	 For water heating coil HCW: If there are no current faults for the heating coil ("Fault on unit" shown as "No"), forced start may be activated: Enter an output level for HCW to start the motor valve and pump for the water heating coil 				
Menu 8.3.4 Cooling	unit (The menu screen is different depending on which cooling unit is selected - CH, CU, CCW, MXCU) If there are no current faults for the cooling unit ("Fault on unit" shown as "No"), forced start may be activated: • Set the output level for the cooling unit				
NB: for CU	Only the cooling unit starts. Operating time is limited (until the unit drops out via the overpressure sensor - automatic reset). There must be a 10-minute interval between starts.				
Menu 8.3.5 Damper	s and relays				
8.3.5 Dampers and relays LSF > Off LSA > Off RGS/AUX OUT > Off Alarm relay > Off VDI light > Off LS ALC > 0%	 The following dampers may be forced open or closed via the menu: LSF (closing damper, outdoor air) LSA (closing damper, exhaust air) LS ALC (closing damper extract air) RGS/AUX OUT (flue gas damper) The alarm relay may be forced to trigger. The light in units fitted with VDI lights may be switched on and off 				

Menu 8.4 - Calibrating MPT

NB:

The pressure transducers (MPT) may only be calibrated when the unit is stopped. The doors should be opened to equalise pressure with the surroundings and to ensure correct calibration.

• Select "Yes" for calibration (automatically changes to "No" again when the MPTs have been calibrated).

Select "Yes" for calibration (automatically changes to "No" again when the MPTs have been calibrated).

8.	4 Calib	oration of MI	PT
Ν	IPT1, F	P1	
Ν	IPT1, F	2	
N	IPT2, F	P1	
N	IPT2, F	2	
N	IPT3, F	P1	
N	IPT3, F	2	
N	IPT4, F	P1	
N	IPT4, F	2	
N	IPT5, F	P1	
N	IPT5, F	2	
N	IPT6, F	P1	
N	IPT6, F	2	
N	IPT7, F	P1	
N	IPT7, F	2	
C	alibrat	e >	No
L	ast cal	ibrated:	
D	ato	xx-xx-xxxx	
Т	id	XX:XX:XX	

6. Alarms

6.1 Alarms and info (Menu 4) Alarms shown in In the event of alarms/warnings on the system, one of the following icons is shown display in the menu bar's right-hand corner in the user menu 21°C OFF due to alarm EXHAUSTO NB: Alarms are shown in the event of unit faults or irregular operation • In the event of a warning icon: Contact the service technician who can help reset the warning. In the event of an alarm icon: Press 🦊 the icon and go directly to menu 4 "Alarm and info" . Check menu "4.5 Current list" for alarm message and use the alarm list at the end of this manual if necessary. Alarm list Menu 4.5 4 Alarm and inf 4.5 Current li Alarm 01 Operating mode > Alarm Yes 01144 10:54:17 02144 Operating readings > Warning No 2009-02-10 Settings Alarm 02 Information No Alarm and info > Reset alarms > No 2009-02-10 11:01:12 Time and weekly plan > Current list > Alarm 03 03073 2009-02-10 Versions > Alarm log list > 18:22:50 Safety functions > Delete alarm log > No Alarm 04 12012 Service > 2009-02-10 18:25:00 Save settings > Alarm 05 13071 2009-02-10 19:00:00 The active alarms can be seen in the current alarms list in Menu 4.5. 6.2 Reset alarms Alarm causes must An alarm can be reset once the cause has been remedied. be found Menu 4 All alarms may be reset by selecting reset alarms in Menu 4 More than one If several alarms are active, they will all be reset simultaneously. alarm Alarms trigger If an alarm repeatedly triggers, contact a service technician. again

6.3 Alarm display and Current list – cause of error

Current list

4.5 Current list	
Alarm 01	01144
2009-02-10	10:54:17
Alarm 02	02144
2009-02-10	11:01:12
Alarm 03	03073
2009-02-10	18:22:50
Alarm 04	12012
2009-02-10	18:25:00
Alarm 05	13071
2009-02-10	19:00:00

Alarm code	If an alarm has been generated, an alarm code is shown in the display in the for- mat XXYYZ, where . XX = unit YY = fault code Z = category of alarm. See category table in this section.	
16 alarms	There can be up to 16 alarms on the "Current list". The first alarm to be added to the queue will be the first alarm to be removed, if there are more than 16 alarms (FIFO principle).	
Info in EXact	shown only in the alarm log list Menu 4.6	
Example - list of alarms	36024 is an alarm on EC controller 1 (36 024). The alarm description is <i>"The sup- ply voltage to the EC controller is too low"</i> (36 02 4). The category is critical (3602 4).	
	Any active alarm is shown under the alarm symbol. If there is more than one alarm, each individual alarm is shown for two seconds on a rotation basis.	

Category

Category (Z)	Alarm level	Effect on operation	lcon
1	Info	Operation continues	
2	Warning	Operation continues	
3	Alarm	Operation continues but with reduced functionality	
4	Critical	Operation stops	_
5	Fire	Triggered fire alarm procedure mode starts	

Find troubleshooting directions in the list of alarms via the alarm number.

Alarm log list -Menu 4.6 Note: It takes 19 seconds for the list to appear.

	A letter is shown following the alarm or info code: C = Clear S = Set The alarm log list shows the latest 100 alarms, warnings and past information. The first alarm/info to be added to the queue will be the first to be removed, if there are more than 100 of them (FIFO principle).
Delete alarm log	The alarm log can be deleted by selecting "Yes". This action cannot be reversed.

6.4 List of alarms

	Main Control VEX/CX				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
00	01	1	Control is powered	Indicates when control is powered	
00	02	1	Unknown reboot of control	 Unknown fault, call service 	
00	03	1	A watchdog rebooted control	 Unknown fault, call service 	
00	04	1	Software rebooted con- trol	The software has rebooted the control system.	
00	05	1	User rebooted control	The user has rebooted the control system.	
00	06	1	Power supply voltage drop rebooted the con- trol system	Reboot of control due to voltage drop	
00	07	1	Time changed	Display showing when the time setting was changed.	
00	16	1	"Manual" alarms reset by user	The user has reset the alarms	

				Frequency converter 1
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
XX	уу	Z		
01	01	4	One or more phases between frequency converter and motor is/are short-circuited to earth	 Check the cable between frequency converter 1 and motor
01	02	4	Max. motor current from frequency con- verter exceeds limit by 300%	 Check for low voltage to frequency converter 1
01	03	4	Frequency converter DC circuit max. voltage exceeds limit	 Check for overvoltage to frequency converter 1
01	04	2	Frequency converter DC circuit voltage too low when motor(s) start(s)	Check for low voltage to frequency converter 1
01	05	4	Frequency converter DC circuit voltage too low when VEX unit stops	 Check for low voltage to frequency converter 1
01	06	4	Frequency converter power supply has lost a phase	 Check wiring from the power supply connection to the isolation switch in the VEX unit Check cable connections from the isolation switch to frequency converter 1
01	07	4	Frequency converter power supply to mo- tor(s) has lost a phase	 Check the cable between frequency converter 1 and motor Check for a short circuit in the motor windings
01	08	4	Frequency converter overheated (based on internal calculations)	 Check if the temperature at frequency converter 1 exceeded the permitted 35°C when the alarm was tripped. If the temper- ature has been too high, the unit will restart when the air tem- perature falls below 35°C.
01	10	4	Frequency converter cooling coil overheated	 Check if the temperature at frequency converter 1 exceeded the permitted 35°C when the alarm was tripped. If the temper- ature has been too high, the unit will restart when the air tem- perature falls below 35°C.
01	11	4	Frequency converter motor(s) drawing too much current	Fault on frequency converter 1
01	12	4	Frequency converter motor 1 overheated	 Check the motor impeller can turn freely Check that the fan impeller is not blocked
01	13	4	Frequency converter motor 2 overheated	 Check the motor impeller can turn freely Check that the fan impeller is not blocked
01	14	4	No modbus communi- cation to frequency converter	Check the cable between the connection board and frequency converter 1

	Frequency converter 1				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
01	15	4	Frequency converter hardware fault	Fault on frequency converter 1	
01	16	4	Frequency converter software version out of date	 Upgrade software in frequency converter 1 	

				Frequency converter 1
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
XX	уу	Z		
02	01	4	One or more phases between frequency converter and motor is/are short-circuited to earth	 Check the cable between frequency converter 2 and motor
02	02	4	Max. motor current from frequency con- verter exceeds limit by 300%	 Check for low voltage to frequency converter 2
02	03	4	Frequency converter DC circuit max. voltage exceeds limit	 Check for overvoltage to frequency converter 2
02	04	2	Frequency converter DC circuit voltage too low when motor(s) start(s)	Check for low voltage to frequency converter 2
02	05	4	Frequency converter DC circuit voltage too low when VEX unit stops	 Check for low voltage to frequency converter 2
02	06	4	Frequency converter power supply has lost a phase	 Check wiring from the power supply connection to the isolation switch in the VEX unit Check cable connections from the isolation switch to frequency converter 2
02	07	4	Frequency converter power supply to mo- tor(s) has lost a phase	 Check the cable between frequency converter 2 and motor Check for a short circuit in the motor windings
02	08	4	Frequency converter overheated (based on internal calculations)	 Check if the temperature at frequency converter 2 exceeded the permitted 35°C when the alarm was tripped. If the temper- ature has been too high, the unit will restart when the air tem- perature falls below 35°C.
02	10	4	Frequency converter cooling coil overheated	 Check if the temperature at frequency converter 2 exceeded the permitted 35°C when the alarm was tripped. If the temper- ature has been too high, the unit will restart when the air tem- perature falls below 35°C.
02	11	4	Frequency converter motor(s) drawing too much current	Fault on frequency converter 2.
02	12	4	Frequency converter motor 1 overheated	 Check the motor impeller can turn freely Check that the fan impeller is not blocked
02	13	4	Frequency converter motor 2 overheated	 Check the motor impeller can turn freely Check that the fan impeller is not blocked
02	14	4	No modbus communi- cation to frequency converter	Check the cable between the connection board and frequency converter 2.

	Frequency converter 1			
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
хх	уу	z		
02	15	4	Frequency converter hardware fault	Fault on frequency converter 2.
02	16	4	Frequency converter software version out of date	 Upgrade software in frequency converter 2.

				Rotor control
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
xx	уу	z		
03	01	3	Rotation alarm	 Check drive belt is intact. Faulty drive belts must be replaced by a service technician. Check the rotor can rotate easily Check for defective rotor guard
03	02	3	Low voltage alarm	 Check for rotor control low voltage at the supply terminals in the control system box
03	03	3	Overvoltage alarm	 Check for rotor control over voltage at the supply terminals in the control system box
03	04	3	Rotor motor drawing too much current	 Alarm indicates the step motor (most likely) or rotor control is defective Check parts and replace defective part
03	05	3	Rotor control overhea- ted	Temperature in the rotor control has risen above 95°C Replace rotor control
03	06	3	No modbus communi- cation to rotor control	 Check the cable between the connection board and rotor con- trol
03	07	4	Rotor control inopera- tive and outdoor air temperature below 3°C	The VEX has stopped because the outdoor air temperature is be- low 3°C and the rotor does not operate.

				Pressure transmitter 1
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
xx	уу	Z		
04	01	4	No modbus communi- cation to pressure transmitter	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MPT1. Check modbus cable for faults from MPT1 to the other units
04	02	4	Calibration fault	 Re-calibrate If the problem continues, MPT1 must be replaced
04	03	1	Calibrate pressure transmitter	Calibrate MPT1
04	04	1	Pressure transmitter using old calibration values	 When the unit starts up this information is displayed. It does not necessarily mean that the pressure transmitter has to be calibrated. Check if the MPT is out of calibration in menu 8.4 and recalibrate if required
04	05	4	Pressure transmitter not calibrated	 Set the VEX/CX to "OFF" in the user menu and open the doors. Next calibrate the MPT in menu 8.4.

	Pressure transmitter 2				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
05	01	4	No modbus communi- cation to pressure transmitter	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MPT2. Check modbus cable for faults from MPT2 to the other units 	
05	02	4	Calibration fault	 Re-calibrate If the problem continues, MPT2 must be replaced 	
05	03	1	Calibrate pressure transmitter	Calibrate MPT2	
05	04	1	Pressure transmitter using old calibration values	 When the unit starts up this information is displayed. It does not necessarily mean that the pressure transmitter has to be calibrated. Check if the MPT is out of calibration in menu 8.4 and recalibrate if required 	
05	05	4	Pressure transmitter not calibrated	 Set the VEX/CX to "OFF" in the user menu and open the doors. Next calibrate the MPT in menu 8.4. 	

				Pressure transmitter 3
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
xx	уу	Z		
06	01	4	No modbus communi- cation to pressure transmitter	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MPT3. Check modbus cable for faults from MPT3 to the other units
06	02	4	Calibration fault	Re-calibrateIf the problem continues, MPT3 must be replaced
06	03	1	Calibrate pressure transmitter	Calibrate MPT3
06	04	1	Pressure transmitter using old calibration values	 When the unit starts up this information is displayed. It does not necessarily mean that the pressure transmitter has to be calibrated. Check if the MPT is out of calibration in menu 8.4 and recalibrate if required
06	05	4	Pressure transmitter not calibrated	• Set the VEX/CX to "OFF" in the user menu and open the doors. Next calibrate the MPT in menu 8.4.

	Pressure transmitter 4				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
07	01	4	No modbus communi- cation to pressure transmitter	 Check the cable between the connection board and MPT4 Check modbus cable for faults from MPT4 to the other units 	
07	02	4	Calibration fault	 Re-calibrate If the problem continues, MPT4 must be replaced 	
07	03	1	Calibrate pressure transmitter	Calibrate MPT4	
07	04	1	Pressure transmitter using old calibration values	 When the unit starts up this information is displayed. It does not necessarily mean that the pressure transmitter has to be calibrated. Check if the MPT is out of calibration in menu 8.4 and recalibrate if required 	
07	05	4	Pressure transmitter not calibrated	 Set the VEX to "OFF" in the user menu and open the doors. Next calibrate the MPT in menu 8.4. 	

	Pressure transmitter 5				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	Z			
08	01	4	No modbus communi- cation to pressure transmitter	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MPT5. Check modbus cable for faults from MPT5 to the other units 	
08	02	4	Calibration fault	 Re-calibrate If the problem continues, MPT5 must be replaced 	
08	03	1	Calibrate pressure transmitter	Calibrate MPT5	
08	04	1	Pressure transmitter using old calibration values	 When the unit starts up this information is displayed. It does not necessarily mean that the pressure transmitter has to be calibrated. Check if the MPT is out of calibration in menu 8.4 and recalibrate if required 	
08	05	4	Pressure transmitter not calibrated	 Set the VEX/CX to "OFF" in the user menu and open the doors. Next calibrate the MPT in menu 8.4. 	

	Pressure transmitter 6					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
xx	уу	z				
09	01	4	No modbus communi- cation to pressure transmitter	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MPT6. Check modbus cable for faults from MPT6 to the other units 		
09	02	4	Calibration fault	 Re-calibrate If the problem continues, MPT6 must be replaced 		
09	03	1	Calibrate pressure transmitter	Calibrate MPT6		
09	04	1	Pressure transmitter using old calibration values	 When the unit starts up this information is displayed. It does not necessarily mean that the pressure transmitter has to be calibrated. Check if the MPT is out of calibration in menu 8.4 and recalibrate if required 		
09	05	4	Pressure transmitter not calibrated	 Set the VEX/CX to "OFF" in the user menu and open the doors. Next calibrate the MPT in menu 8.4. 		

	Pressure transmitter 7					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
xx	уу	Z				
10	01	4	No modbus communi- cation to pressure transmitter	 Check the cable between the connection board and MPT7 Check modbus cable for faults from MPT7 to the other units 		
10	02	4	Calibration fault	 Re-calibrate If the problem continues, MPT7 must be replaced 		
10	03	1	Calibrate pressure transmitter	Calibrate MPT7		
10	04	1	Pressure transmitter using old calibration values	 When the unit starts up this information is displayed. It does not necessarily mean that the pressure transmitter has to be calibrated. Check if the MPT is out of calibration in menu 8.4 and recalibrate if required 		
10	05	4	Pressure transmitter not calibrated	 Set the VEX to "OFF" in the user menu and open the doors. Next calibrate the MPT in menu 8.4. 		

	Temperature sensor					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
xx	уу	z				
11	01	4	TE11: Extract air duct temper- ature sensor discon- nected	 TE11: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
11	02	4	TE11:	TE11:		
			Extract air duct temper- ature sensor short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
11	03	3	TE12: Exhaust air duct tem- perature sensor dis- connected	 TE12: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
11	04	3	TE12: Exhaust air duct tem- perature sensor short- circuited	 TE12: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
11	05	4	TE21: Outdoor air duct tem- perature sensor dis- connected	 TE21: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
11	06	4	TE21: Outdoor air duct tem- perature sensor short- circuited	 TE21: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
11	07	4	TE22: Supply air duct temper- ature sensor discon- nected	 TE22: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
11	08	4	TE22: Supply air duct temper- ature sensor short- circuited	 TE22: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
11	09	4	TE-RPT: Return water pipe tem- perature sensor on wa- ter heating coil discon- nected	 TE-RPT: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		

				Temperature sensor
Unit	Eault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
XX	уу	Z	TE DDT	
11	10	4	TE-RPT: Return water pipe tem- perature sensor on wa- ter heating coil short- circuited	 TE-RPT: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
11	11	4	TE-SPT: Supply water pipe tem- perature sensor on wa- ter cooling coil discon- nected	 TE-SPT: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
11	12	4	TE-SPT: Supply water pipe tem- perature sensor on wa- ter cooling coil short- circuited	 TE-SPT: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
11	13	4	TE-RPT-X: External temperature sensor on return water pipe from water heat- ing cool has been dis- connected	 TE-RPT-X: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
11	14	4	TE-RPT-X: External temperature sensor on return water pipe from water heat- ing cool has short- circuited	 TE-RPT-X: Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
11	15	4	Tice Supply water pipe tem- perature sensor on wa- ter cooling coil discon- nected	 Tice Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
11	16	4	Tice Supply water pipe tem- perature sensor on wa- ter cooling coil short- circuited	 Tice Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.

				Fire thermostats
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
xx	уу	z		
12	01	5	BT40/50, FIRE: Triggered fire alarm has stopped VEX/CX unit	 BT40/50, FIRE: In event of Fire: Follow the building emergency procedure Fire thermostat triggered when there is no fire: The closed circuit is broken. Find out why the fire detection unit has broken the circuit. If no unit is connected – check jumper.
12	02	5	BT70, AUX IN: Triggered fire alarm has stopped VEX/CX unit	 BT70, AUX IN: In event of Fire: Follow the building emergency procedure Fire thermostat triggered when there is no fire: The closed circuit is broken. Find out why the fire detection unit has broken the circuit. If no unit is connected – check jumper.
12	03	3	Fire brigade override error	The fire brigade override panel has been left in an illegal setting.

	Filters					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
xx	уу	z				
13	01	2	Replace extract air fil- ter soon	Replace extract air filter soon		
13	02	3	Replace extract air fil- ter!	Replace extract air filter!		
13	03	2	Replace outdoor air fil- ter soon	Replace outdoor air filter soon		
13	04	3	Replace outdoor air fil- ter soon	Replace outdoor air filter soon		

	HC Alarm					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
хх	уу	Z				
14	01	1	Thermal fuse TSA70 activated	HCE: Info is reset when the temperature falls below 70 $^\circ\!\!\!\mathrm{C}$		
14	02	2	Thermal fuse TSA70 is/has been activated	 HCE: Check airflow across the electric heating coil, select same far speed as when the alarm was triggered 		
				There must be the following min. airflows across the electric heat- ing coil: - HCE240: 135l/s - HCE250: 240l/s - HCE260: 480l/s - HCE270: 750l/s - HCE280: 1,260 l/s		
14	03	1	Thermal fuse TSA120 activated	HCE: Info is reset when the temperature falls below 120 $^\circ\!\mathrm{C}$		
14	04	4	Thermal fuse TSA120 is/has been activated	 HCE: Check airflow across the electric heating coil, select same far speed as when the alarm was triggered There must be the following min. airflows across the electric heating coil: HCE240: 135l/s HCE250: 240l/s HCE260: 480l/s HCE270: 750l/s HCE280: 1,260 l/s Note: The electric heating coil must be manually reset before the alarm can be reset in the control panel. 		
14	07	1	Electrical heating coil internal thermal fuse activated.	HCE: Info is reset when the temperature falls below 60°C in the control system box.		
14	08	4	Electrical heating coil control's internal ther- mal fuse is/has been activated.	 HCE: Temperature in the electrical heating coil's control system box is/has been greater than 60 °C. Check for possible causes for this high temperature and rectify the fault. 		
14	09	3	Return water temp. be- coming too low. VEX running in reduced mode and frost protec- tion	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level. 		

				HC Alarm
<pre>{ Unit </pre>	 Fault code 	N Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
XX	уу		Deture weter term to a	
14	10	3	Return water temp. too low. Frost protection activated. VEX tempo- rarily stopped	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level.
14	11	3	Return water temp. measured by external sensor becoming too low. VEX running in re- duced mode	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level.
14	12	3	Return water temp. measured by external sensor becoming too low. VEX temporarily stopped.	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level.
14	13	4	Max. total no. of re- starts within one hour reached.	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level.

				HC Alorm			
	HC Alarm ≌ │ ∅ │ > │						
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)			
xx	уу	z					
14	14	4	Could not increase re- turn water temp. within five minutes after frost protection with VEX stopped	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level. 			
14	16	3	Heating required but flow through electrical heating coil too low.	HCE: There must be the following min. airflows across the electric heat- ing coil: - HCE240: 135l/s - HCE250: 240l/s - HCE260: 480l/s - HCE270: 750l/s - HCE280: 1,260 l/s			

				HC Sensor
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
XX	уу	Z		
15	01	4	Supply air duct temper- ature sensor discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
15	02	4	Supply air duct temper- ature sensor short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
15	05	4	Supply water pipe tem- perature sensor on wa- ter cooling coil discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
15	06	4	Supply water pipe tem- perature sensor on wa- ter cooling coil short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
15	07	4	Return water pipe tem- perature sensor on wa- ter heating coil discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
15	08	4	Return water pipe tem- perature sensor on wa- ter heating coil short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
15	09	4	Return water pipe ex- ternal temperature sen- sor on water heating coil disconnected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
15	10	4	Return water pipe ex- ternal temperature sen- sor on water heating coil is short-circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
15	13	4	Heat control internal temperature sensor disconnected	 Replace the heat control circuit board MHCW
15	14	4	Heat control internal temperature sensor short-circuited	 Replace the heat control circuit board MHCW
15	15	3	No modbus communi- cation to pressure transmitter	 Check modbus cable between heat control circuit board and subsequent MPT

				HC Controller
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
хх	уу	z		
16	01	1	MHCW: Module config- ured incorrectly. Check CN6 on circuit board.	Check the jumper in the CN6 connector on the heat control circuit board MHCW : -There must be a jumper across 7 and 8. MHCE : - a jumper must not be fitted.
16	02	1	HCW: Fan speed tem- porarily reduced	HCW : Fan speed temporarily reduced because warning limit for frost protection of water heating coil has been reached.
16	03	1	HCW: VEX/CX stop temporarily	HCW : Fan speed temporarily reduced because stop temperature for frost protection of water heating coil has been reached.
16	04	1	HCW: VEX/CX stop.	HCW : Fan speed stopped because of frost alarm on the water heating coil.
16	05	1	HCE: Run-on operating because electric heat- ing coil warm in last three minutes.	HCE : The fans run on for three minutes after the electric heating coil has been in operation.
16	06	1	HC: Heat control cur- rently run locally due to service	HC : Heat control temporarily controlled by Lodam Multi Tool. Override lasts for max. 60 minutes.
16	07	1	HC: Heat control safety functions overridden lo- cally due to service	HC : Heat control temporarily controlled by Lodam Multi Tool. Override lasts for max. 60 minutes.
16	10	1	HCE: Heat output re- duced due to low air- flow in supply air duct	HCE : When the airflow is between 0.5 and 1.5 m/s over the electric heating elements, full heat output is not permitted. Full heat output is permitted only when airflow is more than 1.5 m/s over the heating elements.
16	13	4	HC: Heat control de- tected which was not selected in VEX/CX configuration	HC: The heating coil is configured in menu 3.4 "Accessories".
16	14	4	MHC: Heat control configured incorrectly in connection with se- lected VEX/CX config- uration	Check the jumper in the CN6 connector on the heat control circuit board MHCW: -There must be a jumper across 7 and 8. MHCE: - a jumper must not be fitted.
16	15	4	MHCW: No modbus communication to wa- ter heat control	 MHCW: Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MHCW. Check modbus cable for faults from HCW to the other units.
16	16	3	MHCE: No modbus communication to elec- trical heating control	 MHCE: Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MHCE. Check modbus cable for faults from HCE to the other units

				Airflow/pressure
XX Unit	夭 Fault code	N Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
20	01	1	Airflow/pressure in ex- tract air duct airflow too high	 The unit provides airflow that is 25% above the setpoint. Check the fan speed settings in indoor air quality level and the fan limits.
20	02	2	Airflow/pressure in ex- tract air duct has been too high for last 30 mi- nutes.	 The unit has provided an airflow/pressure that is 25% above the setpoint for more than 30 minutes. Check the fan speed settings in indoor air quality level and the fan limits.
20	03	1	Airflow/pressure in ex- tract air duct too low	 The unit is providing an airflow/pressure that is 25% below the setpoint. Check the fan speed settings in indoor air quality level and the fan limits.
20	04	2	Airflow/pressure in ex- tract air duct has been too low for last 30 mi- nutes	 The unit has provided airflow/pressure that is 25 % below the setpoint for more than 30 minutes. Check the fan speed settings in indoor air quality level and the fan limits.
20	05	1	Airflow/pressure in supply air duct too high	 The unit provides airflow that is 25% above the setpoint. Check the fan speed settings in indoor air quality level and the fan limits.
20	06	2	Airflow/pressure in supply air duct has been too high for last 30 minutes	 The unit has provided an airflow/pressure that is 25% above the setpoint for more than 30 minutes. Check the fan speed settings in indoor air quality level and the fan limits.
20	07	1	Airflow/pressure in supply air duct too low	 The unit is providing an airflow/pressure that is 25% below the setpoint. Check the fan speed settings in indoor air quality level and the fan limits.
20	08	2	Airflow/pressure in supply air duct has been too low for last 30 minutes	 The unit has provided airflow/pressure that is 25 % below the setpoint for more than 30 minutes. Check the fan speed settings in indoor air quality level and the fan limits.
20	09	1	Minimum airflow for cooling/heating units in the supply air duct was not achieved	 The required supply airflow for operating cooling/heating units was not achieved. Check the fan speed settings in indoor air quality level and the fan limits.
20	10	3	Minimum airflow for cooling/heating units in the supply air duct has not been achieved for last 30 minutes	 The required supply airflow for operating cooling/heating units was not achieved within 30 minutes. Check the fan speed settings in indoor air quality level and the fan limits.
20	11	1	Cooling cannot be re- leased because sup- ply/extract airflow ratio was not achieved	 The required air balance between supply air and extract air is higher than the permitted limit of 1. 15:1 Check the fan speed settings in indoor air quality level and the fan limits.

	Airflow/pressure				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
20	12	3	Cooling cannot be re- leased because sup- ply/extract airflow ratio has not been achieved in last 30 minutes	 The required air balance between supply air and extract air is still higher than the permitted limit of 1.15:1 after 30 minutes. Check the fan speed settings in indoor air quality level and the fan limits. 	

	CO ₂ sensor				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
21	01	2	No modbus communi- cation to MIO CO ₂ module	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MIO module. Check the modbus cable from the MIO module to the other units for faulty wiring. Check the DIP-switch settings in the MIO module, refer to the MIO manual if necessary 	
21	02	2	CO_2 level below 100 ppm. CO_2 sensor may be defective.	 CO₂ sensor may be defective and should be replaced. 	
21	03	2	CO ₂ input via BMS se- lected and BMS has not been configured.	Configure BMS.	

	Temperature sensor MIO-TS					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
xx	уу	z				
22	01	2	No modbus communi- cation to MIO-TS mod- ule	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MIO module. Check the modbus cable from the MIO module to the other units for faulty wiring. Check the DIP-switch settings in the MIO module, refer to the MIO manual if necessary 		
22	02	2	Temperature sensor disconnected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		
22	03	2	Temperature sensor short-circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 		

	Humidity sensor RH				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
XX	уу	z			
23	01	2	No modbus communi- cation to MIO-RH mod- ule	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MIO module. Check the modbus cable from the MIO module to the other units for faulty wiring. Check the DIP-switch settings in the MIO module, refer to the MIO manual if necessary 	
23	02	2	Humidity level is below 2% – RH sensor may be defective	 Humidity sensor may be defective and should be replaced 	
23	03	2	RH input via BMS se- lected and BMS has not been configured.	Configure BMS.	

	Motion sensor PIR				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
24	01	2	No modbus communi- cation to PIR module	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and PIR module. Check the modbus cable from the MCCW module to the other units for faulty wiring. Check the DIP switch settings in the PIR module; refer to the MIO module manual or the PIRB-AS manual if necessary. 	
24	02	2	PIR input via BMS se- lected and BMS has not been configured.	Configure BMS.	

				Cooling unit
XX Unit	돈 Fault code	N Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
25	01	3	Cooling unit stopped because of low evapo- rator pressure	 Check the low-pressure switch. The low-pressure switch cuts out at 0.69 bar and re-engages at 2.21 bar. The unit must cut out at the low-pressure switch and this can be checked by comparing it with the actual manometer pressure Check VEX regulating valve function. Check volume of the unit. The required amount is shown on the information plate.
25	02	3	Cooling unit stopped because of high evapo- rator pressure	 Check the high-pressure switch. The high-pressure switch cuts out at 29.3 bar. The unit must cut out at the high-pressure switch and this can be checked by comparing it with the actual manometer pressure Check VEX regulating valve function. Check volume of the unit. The required amount is shown on the information plate.
25	03	3	Cooling unit stopped because of overeating in cooling compressor	 Check the compressor power consumption Check airflow across the cooling unit, select same fan speed as when the alarm was triggered. There must be the following min. airflows across the cooling unit: CU240: 195I/s CU250: 417I/s CU260: 528I/s CU270: 611I/s Check VEX regulating valve function. Check volume of the unit.
25	04	3	Cooling unit stopped because of high com- pressed gas tempera- ture	 Check the VEX airflow measurement, which controls the airflow through the condenser coil, is correct Check airflow across the cooling unit, select same fan speed as when the alarm was triggered. There must be the following min. airflows across the cooling unit: CU240: 195I/s CU250: 417I/s CU260: 528I/s CU270: 611I/s Check volume of the unit.
25	05	3	Supply air duct temper- ature sensor discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
25	06	3	Supply air duct temper- ature sensor short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
25	07	3	Outdoor air duct tem- perature sensor dis- connected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.

	Cooling unit				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	Z			
25	08	3	Outdoor air duct tem- perature sensor short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 	
25	15	3	Cooling control detec- ted but not selected in VEX configuration	The cooling unit is configured in Menu 3.3 VEX configuration	
25	16	3	No modbus communi- cation to cooling con- trol	 Check the modbus cable between the connection board and the MCUC module. Check the modbus cable from the MCUC module to the other units for faulty wiring 	

	External cooling unit (MXCU) sensor				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
хх	уу	z			
27	01	4	Supply air duct temper- ature sensor discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 	
27	02	4	Supply air duct temper- ature sensor short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 	

	External cooling unit (MXCU) control					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
xx	уу	z				
28	01	1	Module configured in- correctly. Check CN6 on circuit board	 Check jumper in CN6 connector on cooling control circuit board. There must be a jumper across 4 and 6, and across 5 and 6. 		
28	06	1	Cooling control current- ly run locally due to service	Cooling control temporarily controlled by Lodam Multi Tool. Over- ride lasts for max. 60 minutes.		
28	07	1	Cooling control safety functions overridden lo- cally due to service	Cooling control temporarily controlled by Lodam Multi Tool. Over- ride lasts for max. 60 minutes.		
28	13	4	Cooling control detec- ted which was not se- lected in the VEX/CX configuration	The cooling unit is configured in menu 3.4 "Accessories".		
28	14	4	Cooling control config- ured incorrectly in con- nection with the selec- ted VEX/CX configura- tion	 Check jumper in CN6 connector on cooling control circuit board. There must be a jumper across 4 and 6, and across 5 and 6. 		
28	15	4	No modbus communi- cation to cooling con- trol	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MXCU module. Check the modbus cable from the MXCU module to the other units for faulty wiring. 		

				MCCW
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
XX	уу	Z		
30	01	4	Supply air duct temper- ature sensor discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
30	02	4	Supply air duct temper- ature sensor short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
30	05	4	Supply water pipe tem- perature sensor on wa- ter cooling coil discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
30	06	4	Supply water pipe tem- perature sensor on wa- ter cooling coil short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.

	MCCW control					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
XX	уу	z				
31	01	1	Module configured in- correctly. Check CN6 on circuit board	 Check jumper in CN6 connector on cooling control circuit board. There must be a jumper across 4 and 6, and across 5 and 6. 		
31	06	1	Cooling control current- ly run locally due to service	Cooling control temporarily controlled by Lodam Multi Tool. Over- ride lasts for max. 60 minutes.		
31	07	1	Cooling control safety functions overridden lo- cally due to service	Cooling control temporarily controlled by Lodam Multi Tool. Over- ride lasts for max. 60 minutes.		
31	13	4	Cooling control detec- ted which was not se- lected in the VEX/CX configuration	In menu 3. "Accessories" is configured for the cooling unit		
31	14	4	Cooling control config- ured incorrectly in con- nection with the selec- ted VEX/CX configura- tion	 Check jumper in CN6 connector on cooling control circuit board. There must be a jumper across 4 and 6, and across 5 and 6. 		
31	15	4	No modbus communi- cation to cooling con- trol	 Check the modbus cable between the connection board and the MCCW module Check the modbus cable from the MCCW module to the other units for faulty wiring 		

	Modbus Status					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
xx	уу	Z				
34	01	1	SendModbusDataRe- ceive fail	Contact EXHAUSTO A/S		
34	02	1	SendModbusDataSend fail	Contact EXHAUSTO A/S		
34	03	1	SendModbusDataCon- nect fail	Contact EXHAUSTO A/S		
34	04	1	SetRegister Connect fail	Contact EXHAUSTO A/S		
34	05	1	SetCoil Connect fail	Contact EXHAUSTO A/S		
34	06	1	GetRegister Connect fail	Contact EXHAUSTO A/S		

	External control				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
35	01	3	No modbus communi- cation to the MIO- AUX1 (extract air) module	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MIO module. Check the modbus cable from the MIO module to the other units for faulty wiring. Check the DIP-switch settings in the MIO module, refer to the MIO manual if necessary 	
35	02	3	No modbus communi- cation to the MIO- AUX2 (supply air) mod- ule	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and MIO module. Check the modbus cable from the MIO module to the other units for faulty wiring. Check the DIP-switch settings in the MIO module, refer to the MIO manual if necessary 	

	EC Controller 1					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
ХХ	уу	Z				
36	02	4	The supply voltage to the EC controller is too low	 Check for low voltage to EC controller 1 		
36	03	4	The supply voltage to the EC controller is too high	 Check for overvoltage to EC controller 1 		
36	04	1	The EC controller mo- tor is drawing too much current	 Check the fan impeller can turn freely Check wear on the motor ball bearings 		
36	06	1	Temperature in the EC controller power mod- ule has risen above 90°C	 Check if the temperature at EC controller 1 exceeded the per- mitted 35°C when the alarm was tripped. If the temperature has been too high, the unit will restart when the air tempera- ture falls below 35°C. 		
36	07	4	Temperature in the EC controller power mod- ule has risen above 120°C	 Check if the temperature at EC controller 1 exceeded the per- mitted 35°C when the alarm was tripped. If the temperature has been too high, the unit will restart when the air tempera- ture falls below 35°C. 		
36	08	4	EC controller hardware fault	 Restart unit. If this does not remedy the fault, replace EC con- troller 1. 		
36	09	4	MCE FAULT	 Restart unit. If this does not remedy the fault, replace EC con- troller 1. 		
36	10	4	Motor blocked	 EC controller motor is blocked 		
36	11	4	EC controller power supply to motor has lost a phase	 Check the cable between EC controller 1 and motor Check for a short circuit in the motor windings 		
36	14	4	The software version in the EC controller is out of date	 Upgrade software in EC controller 1. 		
36	15	4	EC controller does not fit VEX/CX size	 Check whether the EC controller fits the VEX/CX size, see VEX/CX configuration. 		
36	16	4	No modbus communi- cation to EC controller	 Check the modbus cable between the main board and the EC controller 		

	EC Controller 2					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
ХХ	уу	Z				
37	02	4	The supply voltage to the EC controller is too low	 Check for low voltage to EC controller 2 		
37	03	4	The supply voltage to the EC controller is too high	 Check for overvoltage to EC controller 2 		
37	04	1	The EC controller mo- tor is drawing too much current	 Check the fan impeller can turn freely Check wear on the motor ball bearings 		
37	06	1	Temperature in the EC controller power mod- ule has risen above 90°C	 Check if the temperature at EC controller 2 exceeded the per- mitted 35°C when the alarm was tripped. If the temperature has been too high, the unit will restart when the air tempera- ture falls below 35°C. 		
37	07	4	Temperature in the EC controller power mod- ule has risen above 120°C	 Check if the temperature at EC controller 2 exceeded the per- mitted 35°C when the alarm was tripped. If the temperature has been too high, the unit will restart when the air tempera- ture falls below 35°C. 		
37	08	4	EC controller hardware fault	 Restart unit. If this does not remedy the fault, replace EC con- troller 2. 		
37	09	4	MCE FAULT	 Restart unit. If this does not remedy the fault, replace EC con- troller 2. 		
37	10	4	Motor blocked	EC controller motor is blocked		
37	11	4	EC controller power supply to motor has lost a phase	 Check the cable between EC controller 2 and motor Check for a short circuit in the motor windings 		
37	14	4	The software version in the EC controller is out of date	 Upgrade software in EC controller 2. 		
37	15	4	EC controller does not fit VEX/CX size	 Check whether the EC controller fits the VEX/CX size, see VEX/CX configuration. 		
37	16	4	No modbus communi- cation to EC controller	 Check the modbus cable between the main board and the EC controller 		

	Configuration				
Device	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
xx	уу	z			
40	01	4	Type has not been configured	 Configure the VEX/CX in menu 3.3 	
40	02	4	VEX size has not been configured	 Configure the VEX/CX size in menu 3.3 	
40	03	4	VEX orientation has not been configured	 Configure orientation in menu 3.3 	

	Dining solution					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
xx	уу	z				
42	01	4	Motor control 1 does not fit Dining Solution	 Control of external extract air fan, which replaces internal ex- tract air fan 		

				Cooling Alarm
X Unit	돈 Fault code	N Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
43	01	3	Temperature sensor af- ter the CCW surface in the supply air duct is short-circuited.	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
43	02	3	Temperature sensor af- ter the CCW surface in the supply air duct is open-circuit.	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
43	03	3	The temperature sen- sor in the supply to the CCW surface in the ex- tract air duct is short- circuited.	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
43	04	3	The temperature sen- sor in the supply to the CCW surface in the ex- tract air duct is open- circuit.	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
43	05	3	Pressure gas tempera- ture sensor has short- circuited.	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
43	06	3	Pressure gas tempera- ture sensor has been interrupted.	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
43	07	3	Suction gas pressure sensor has short- circuited.	 Check connection between sensor and cooling control, Contact EXHAUSTO service.
43	08	3	Suction gas pressure sensor has been inter- rupted.	 Check connection between sensor and cooling control, Contact EXHAUSTO service.
43	09	3	Pressure gas pressure sensor has short- circuited.	 Check connection between sensor and cooling control, Contact EXHAUSTO service.
43	10	3	Pressure gas pressure sensor has been inter- rupted.	 Check connection between sensor and cooling control, Contact EXHAUSTO service.
43	11	3	Low pressure guard has triggered a stop.	Call a cooling technician.
43	12	3	High pressure guard has triggered a stop.	Call a cooling technician. Three operational stops due to high pressure are permitted before this alarm is triggered.

	Cooling Alarm					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
хх	уу	z				
43	13	3	High pressure gas tem- perature has triggered a stop.	Call a cooling technician.		
43	14	3	MC alarm output acti- vated.	Read any error code on the motor controller display and contact service.		
				 This alarm cannot be cancelled via the HMI panel until it has been cancelled on the cooling unit's motor controller: Disconnect the supply voltage to the cooling unit for 1 minute via the isolation switch on the cooling unit. Then cancel the alarm via the HMI panel. 		
43	15	4	Unknown configura- tion.	Chiller size has not been configured. Contact EXHAUSTO service.		

	Cooling status						
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)			
xx	уу	z					
44	02	2	Suction pressure is low.	The unit is running in reduced mode.			
44	03	2	Pressure gas pressure is high.	The unit is running in reduced mode.			
44	10	2	Reduced operation of CH cooling unit due to low flow temperature to CCW coil exhaust.	 CH cooling unit is running in reduced mode due to low supply temperature to the coil in the exhaust duct. Check that the frost protection level is correctly set for the glycol mixture. Increase the air flow. 			
44	11	2	Blocked operation of CH cooling unit due to cut-out at too low flow temp., less than 3h ago.	 CH cooling unit has stopped due to low supply temperature to the coil in the exhaust duct. Check that the frost protection level is correctly set for the gly-col mixture. Increase the air flow. 			
44	15	4	CH cooling unit has not been correctly config- ured.	A CH cooling unit has been found, but the unit is not selected in the "Accessories" menu.			
44	16	4	CH cooling unit com- munication error.	Communication to the cooling pump unit has been interrupted.1. Check the unit's supply voltage.2. Check the modbus connection between the EXact control system and the CH cooling unit.			

	МХНР				
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)	
ХХ	уу	Z			
45	01	3	Supply air duct temper- ature sensor discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 	
45	02	3	Supply air duct temper- ature sensor short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced. 	
45	03	3	External DX unit has an active alarm	 A general alarm has been received from the external DX unit. Check the control/HMI on the external DX unit for information about the error type and how to remedy it. 	
45	04	3	Menu settings have not been confirmed	Setup of MXHP in HMI menu 3.1.9 has not been confirmed.Review the setup and confirm it to remedy the error.	

				MXHP control					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)					
xx	уу	z							
46	01	1	Module configured in- correctly. Check CN6 on circuit board	 Check the jumper in the CN6 connector on the control circuit board. There must be a jumper across 4 and 6, across 5 and 6, and across 7 and 8. 					
46	06	1	Cooling control current- ly run locally due to service	Override temporarily controlled by Lodam Multi Tool. Override lasts for max. 60 minutes.					
46	07	1	Cooling control safety functions overridden lo- cally due to service	Override temporarily controlled by Lodam Multi Tool. Override lasts for max. 60 minutes.					
46	13	4	Cooling control detec- ted which was not se- lected in the VEX/CX configuration	In menu 3. "Accessories" is configured for the cooling unit					
46	14	4	Cooling control config- ured incorrectly in con- nection with the selec- ted VEX/CX configura- tion	 Check the jumper in the CN6 connector on the control circuit board. There must be a jumper across 4 and 6, across 5 and 6, and across 7 and 8. 					
46	15	4	No modbus communi- cation to cooling con- trol	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and the MXHP module. Check the modbus cable from the MXHP module to the other units for faulty wiring. 					

				MCOCW Alarm
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
XX	уу	Z		
47	05	3	External pump or DX unit has an active alarm	 A general alarm has been received from the external pump or DX unit. Check the control/HMI on the external pump or DX unit for information about the error type and how to remedy it.
47	06	4	Menu settings have not been confirmed	Setup of MCOCW in HMI menu 3.1.10 has not been confirmed.Review the setup and confirm it to remedy the error.
47	09	3	Return water temp. be- coming too low. VEX/CX running in re- duced mode and with frost protection.	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level.
47	10	3	Return water temp. too low. Frost protection activated. VEX/CX temporarily stopped.	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level.
47	11	3	Return water temp. measured by external sensor becoming too low. VEX/CX running in reduced mode.	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3. The alarm resets automatically when the temperature rises above the heat retention level.

				MCOCW Alarm
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
хх	уу	z		
47	12	3	Return water temp. measured by external sensor becoming too low. VEX/CX tempora- rily stopped.	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3.
				The alarm resets automatically when the temperature rises above the heat retention level.
47	13	4	Max. total no. of re- starts within one hour reached.	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3.
				The alarm resets automatically when the temperature rises above the heat retention level.
47	14	4	Could not increase re- turn water temp. within five minutes after frost protection with VEX/CX stopped.	 HCW: Check that the hot water supply to the heating coil is functioning. If the hot water supply is functioning, check if the motor valve opens and the circulation pump is running. Check by turning the unit to "OFF" in the user menu and force start the motor valve and circulation pump in specialist menu 8.3.
				The alarm resets automatically when the temperature rises above the heat retention level.

				MCOCW Sensor
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
ХХ	уу	Z		
48	01	4	Supply air duct temper- ature sensor discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
48	02	4	Supply air duct temper- ature sensor short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
48	05	4	Supply water pipe tem- perature sensor on wa- ter cooling coil discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
48	06	4	Supply water pipe tem- perature sensor on wa- ter cooling coil short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
48	07	4	Return water pipe tem- perature sensor on wa- ter heating coil discon- nected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
48	08	4	Return water pipe tem- perature sensor on wa- ter heating coil short- circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
48	09	4	Return water pipe ex- ternal temperature sen- sor on water heating coil disconnected	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.
48	10	4	Return water pipe ex- ternal temperature sen- sor on water heating coil is short-circuited	 Check the sensor's resistance complies with the actual temperature. See temperature resistance table appendix 2. If the sensor resistance has significantly changed in value, it should be replaced.

				MCOCW Control
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)
xx	уу	z		
49	01	1	Module configured in- correctly. Check CN6 on circuit board	 Check the jumper in the CN6 connector on the MCOCW module. There must be a jumper across 5 and 6.
49	02	1	Fan speed temporarily reduced	Fan speed temporarily reduced because warning limit for frost pro- tection of water heating coil has been reached.
49	03	1	VEX temporarily stop- ped	Fan speed temporarily reduced because stop temperature for frost protection of water heating coil has been reached.
49	04	1	VEX stopped	MCOCW is temporarily controlled by the Lodam Multi Tool.
49	06	1	Heat control currently run locally due to serv- ice	MCOCW temporarily controlled by Lodam Multi Tool. Override lasts for max. 60 minutes.
49	07	1	Heat control safety functions overridden lo- cally due to service	MCOCW temporarily controlled by Lodam Multi Tool. Override lasts for max. 60 minutes.
49	11	2	Heating has been blocked due to cold water in the feed pipe	 EXact has detected a heating requirement, but via TE-SPT has registered cold water in the feed pipe. Heating is therefore blocked for 6 hours. Check that there is hot water in the feed pipe if the heating function is required.
49	12	2	Cooling has been blocked due to hot wa- ter in the feed pipe	 EXact has detected a cooling requirement, but via TE-SPT has registered hot water in the feed pipe. Cooling is therefore blocked for 6 hours. Check that there is cold water in the feed pipe if the cooling function is required.
49	13	4	Heat control detected which was not selected in VEX/CX configura- tion	The heating coil is configured as MCOCW in menu 3.4 "Accesso- ries".
49	14	4	Heat control configured incorrectly in connec- tion with selected VEX/CX configuration	 Check the jumper in the CN6 connector on the MCOCW module. There must be a jumper across 5 and 6.
49	15	4	No modbus communi- cation to water heat control	 Check the modbus cable between the connection board (EX-act)/main board (EXact2) and the MCOCW module. Check the modbus cable from the MCOCW module to the other units for faulty wiring.

	ALC extract air damper alarm					
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)		
хх	уу	z				
52	01	4	MD1: No communica- tion to damper motor.	 Check Modbus cable to and from ALC damper for faulty mounting. 		
52	02	4	MD1: Incorrect type of damper motor.	 Check that the damper motor type and Modbus address (17) are correct. 		
52	03	1	MD1: Damper motor cannot move.	 Check whether ALC dampers have reduced mobility (are blocked). 		


	ALC alarm									
Unit	Fault code	Category	Alarm description	Troubleshooting (See appendix 1: "Simplified diagrams" for the location of dampers, sen- sors, air directions, etc.)						
xx	уу	z								
54	01	2	Increased rotation leakage	Leakage pressure (diff. pressure) is below 0 Pa. The ALC damper cannot compensate for the pressure conditions. • If necessary, contact support.						
54	02	2	Diff pressure below 0 Pa for more than 5 min. Leakage may oc- cur.	 The unit continues, but there is a risk of leakage. Check whether the ALC damper in the extract air is blocked. 						
54	03	2	Excessive damper ac- tivity/intermittent fluctu- ations	The unit continues, but there is a risk of the damper motor suffer- ing overload • If necessary, contact support.						


Appendix 1 - Simplified diagrams


Simplified diagrams


Simplified diagrams for unit with chiller


For units with an installed chiller, see the simplified diagrams at the rear of the chiller instructions.

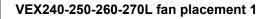

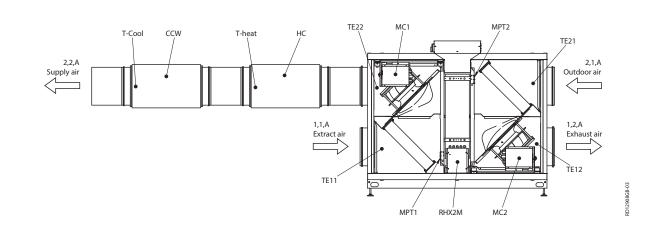

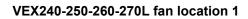

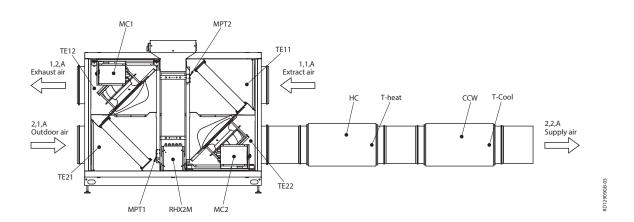

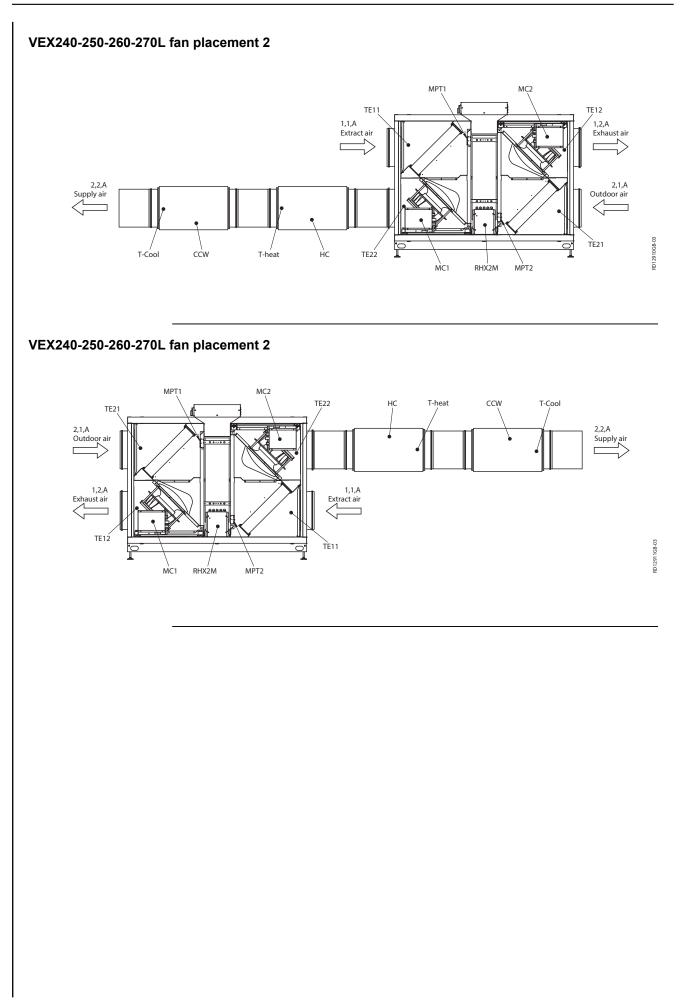

Appendix 2 - Temperature resistance table

Temperature resistance table DC95

Temperature [°C]	Resistance [Ohm]	Temperature [°C]	Resistance [Ohm]	Temperature [°C]	Resistance [Ohm]
-40	324270	-1	34464	38	5774
-39	320139	0	32737	39	5545
-38	299580	1	31107	40	5326
-37	280471	2	29567	41	5116
-36	262702	3	28113	42	4917
-35	246172	4	26739	43	4726
-34	230786	5	25440	44	4543
-33	216458	6	24211	45	4369
-32	203110	7	23049	46	4202
-31	190669	8	21950	47	4042
-30	179068	9	20910	48	3890
-29	168246	10	19924	49	3743
-28	158145	11	18991	50	3604
-27	148714	12	18107	51	3470
-26	139904	13	17270	52	3342
-25	131670	14	16476	53	3219
-24	123972	15	15722	54	3101
-23	116772	16	15008	55	2988
-22	110035	17	14330	56	2880
-21	103727	18	13687	57	2777
-20	97820	19	13076	58	2678
-19	92286	20	12496	59	2582
-18	87099	21	11945	60	2491
-17	82235	22	11421	61	2403
-16	77673	23	10923	62	2319
-15	73391	24	10450	63	2239
-14	69372	25	10000	64	2161
-13	65597	26	9572	65	2087
-12	62050	27	9164	66	2015
-11	58717	28	8776	67	1947
-10	55582	29	8407	68	1881
-9	52634	30	8055	69	1817
-8	49860	31	7720	70	1756
-7	47249	32	7401	71	1698
-6	44790	33	7097	72	1641
-5	42474	34	6807	73	1587
-4	40292	35	6530	74	1535
-3	38234	36	6266	75	1485
-2	36294	37	6014	76	1437



Temperature [°C]	Resistance [Ohm]	Temperature [°C]	Resistance [Ohm]	Temperature [°C]	Resistance [Ohm]
77	1390	93	840.6	109	528.5
78	1346	94	815.7	110	514.0
79	1303	95	791.6	111	500.0
80	1261	96	768.4	112	486.4
81	1221	97	746.0	113	473.2
82	1183	98	724.3	114	460.5
83	1146	99	703.3	115	448.2
84	1110	100	683.1	116	436.3
85	1075	101	633.5	117	424.7
86	1042	102	644.6	118	413.5
87	1010	103	626.3	119	402.7
88	979.4	104	608.6	120	392.1
89	949.6	105	591.5	121	382.0
90	920.9	106	574.9	122	372.1
91	893.2	107	558.9	123	362.5
92	866.4	108	543.4	124	353.2

EXHAUSTO

EXHAUSTO

EXHAUSTO



Scan code and go to addresses at www.exhausto.com

