

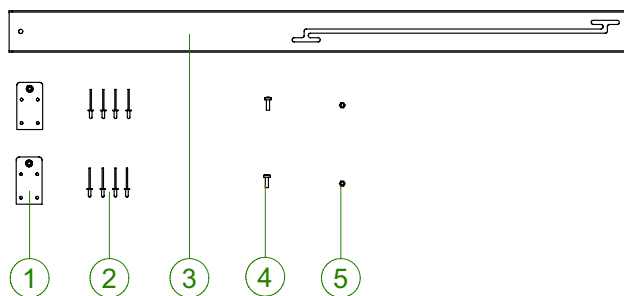


- ⓐ Installation of safety fitting - Installation method B
- ⓓ Ⓝ Montage af sikrings-beslag - Monteringsmetode B
- ⓓ Anbau der Sicherheitsbeslag - Montagebeispiel B
- Ⓢ Montage av specialbeslag - Montagesätt B

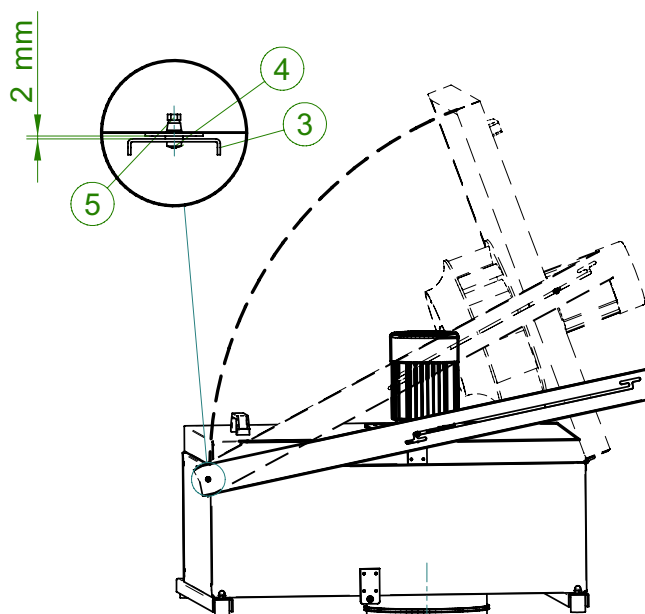

	A [mm]	B [mm]	C [mm]
BESB250	370	77	-
BESB315	370	77	-
BESB400	370	296	-
BESB500	370	-	591

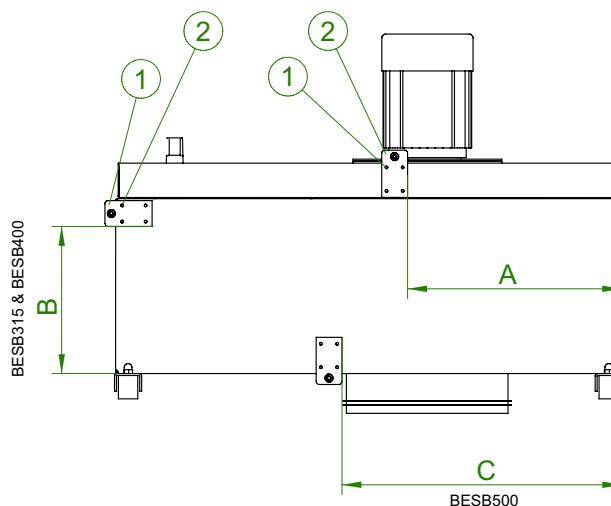

(GB)

Installation of safety fitting - Installation method D

(DK)

(N)


Montage af sikrings-beslag - Monteringsmetode D

(D)


Anbau der Sicherheitsbeslag - Montagebeispiel D

(S)

Montage av specialbeslag - Montagesätt D

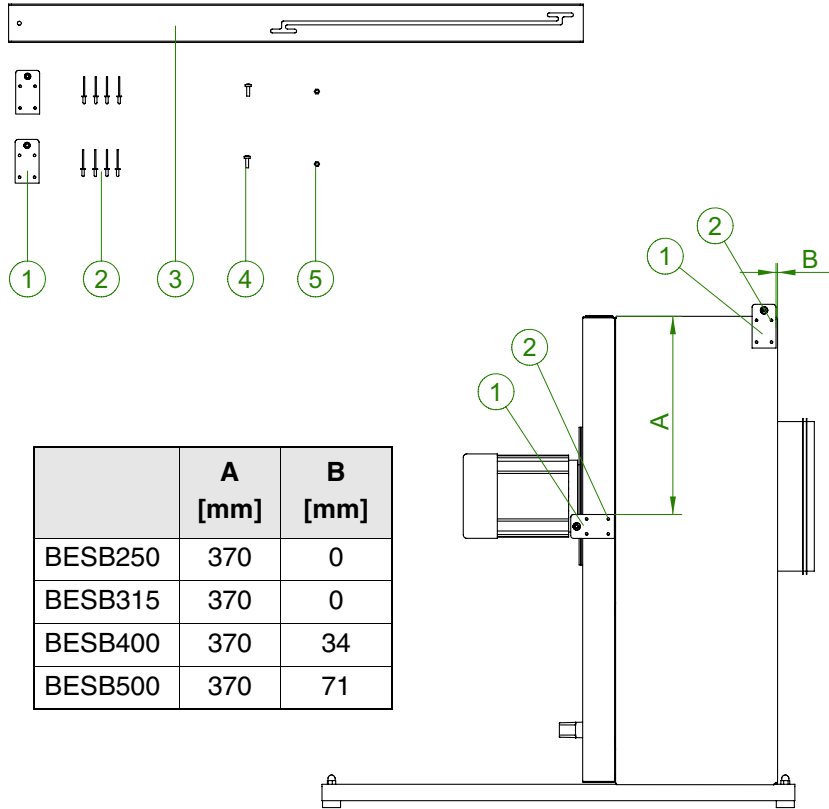

	A [mm]	B [mm]
BESB250	370	0
BESB315	370	0
BESB400	370	34
BESB500	370	71

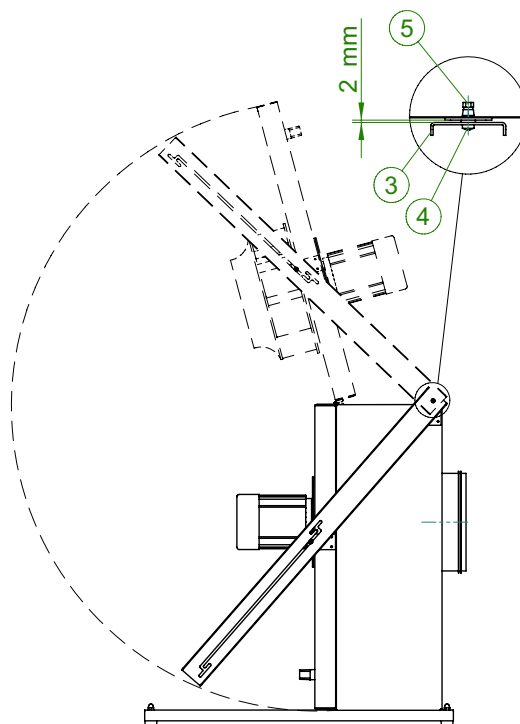

Scan code and go to addresses at www.exhausto.com